


SK2048VHA-4

Monochrome Line Scan Camera

2048 pixels $8 \times 8 \mu\text{m}^2$, line frequency up to 52.63 kHz

Line scan camera, high speed with 52.63 kHz maximum line rate, spectral range of 200 to 1000 nm.

CCD



GiG
VISION
GEN$\langle \rangle$CAM

Instruction Manual



Sample Configuration

- 1 CCD line scan camera
SK2048VHA-4
mounted with
- 2 Mounting bracket SK5105-L
- 3 Clamping claws SK5101
- 4 Video (CCTV)-objectiv



How to Use this Instruction Manual



Please read the following sections of this Instruction Manual before unpacking, assembly or use of the Line Camera System:

The safety warnings on this page

Introduction to the system, page 4

Installation and Setup, page 7

Keep this Instruction Manual in a safe place for future reference.

Safety Warnings



▶ Electricity Warning

Assembly and initial operation of the line scan camera must be carried out under dry conditions.

Do not operate the camera if you notice any condensation or moisture in order to avoid danger of a short circuit or static discharge!



Line scan cameras are mostly used in combination with a motion device such as a translation stage, a conveyer or a rotational drive, as well as with high intensity light sources.

For assembly close down these devices whenever possible. Beyond that, please consider the following warnings:



▶ Mechanics Warning

Ensure that the motion device and the scan way is free to move and that no obstacles are in the way.

Do not place any part of the body in the way of moving parts!



▶ Risk of High Power Lighting

According to the application, laser or high power LED light sources might be used. These can affect your eyesight temporarily or even cause permanent damage to the eyes or skin.

Do not look directly into the light beam!

How to Use this Instruction Manual	2
Safety Warnings	2
Contents	3
1 Introducing the SK2048VHA-4 Line Scan Camera	4
1.1 Intended Purpose and Overview	4
1.2 System Setup at a Glance	5
1.3 Computer System Requirements	6
1.4 SK2048VHA-4 Line Scan Camera - Specifications	6
2 Installation and Setup	7
2.1 Mechanical Installation: Mounting Options and Dimensions	7
2.2 Electrical Installation: Connections and I/O Signals	8
2.3 GigE Connections and Software Installation	9
GigE Network Integration for Standard GigE Network Adapters	9
2.4 SkLineScan Software Installation (Optional)	11
SkLineScan Installation	11
SkLineScan Start-up	11
Camera Setup	11
Initial Function Test	11
3 Camera Control and Performing a Scan	12
3.1 Software: SkLineScan	12
Function Overview: SkLineScan Toolbar	12
Visualization of the Sensor Output	13
3.2 Adjustments for Optimum Scan Results	14
Lens Focussing	14
Sensor Alignment	15
Gain/Offset Adjustment	15
Shading Correction	16
Optimum brightness adjustment, Integration Time	17
Synchronization of the Image Acquisition with the Feed Rate of the Object	18
Synchronization Modes	20
3.3 GigE Vision Device Feature List (Gen<i>Cam compliant)	22
4 Advanced Camera Control Functions	24
4.1 Camera Control by Commands	24
Set Commands	25
Request Commands	25
4.2 Advanced Synchronization Control	26
Advanced Trigger Functions and Sync Control Register (SCR) Settings	26
Example Timing Diagrams	27
5 Sensor information	28
Glossary	30
CE-Conformity	33
Warranty	33
Accessories	34

1 Introducing the SK2048VHA-4 Line Scan Camera

1.1 Intended Purpose and Overview

The SK line scan camera series is designed for a wide range of vision and inspection applications in both industrial and scientific environments.



The SK2048VHA-4 GigE Vision™ line scan camera uses the Gigabit Ethernet communication protocol and is 100% compliant with the GigE Vision™ specifications and the Gen<I>Cam™ standard.

GigE Vision allows for fast image transfer using low cost standard cables up to distances of 100 m. With GigE Vision, hardware and software from different vendors can interoperate seamlessly via the GigE connections. The camera is connected to a computer either via the GigE socket directly or through a Gigabit Ethernet switch.

When taking the camera into operation the first time the Schäfter+Kirchhoff SkLineScan® program is recommended. Once the camera driver and the SkLineScan® program have been loaded from the SkLineScan CD or zip-file then the camera can be parameterized. The parameters, such as integration time, synchronization mode or shading correction, are permanently stored in the camera even after a power-down or disconnection from the PC.

The oscilloscope display in the SkLineScan® program can be used to adjust the focus and aperture settings, for evaluating field-flattening of the lens and for orientation of the illumination and the sensor, see **14.6 GigE Connections and SkLineScan Software Installation (p. 69)**.

The Schäfter+Kirchhoff GigE Vision line scan cameras implement a superset of the Gen<I>Cam™ specification which defines the device capabilities. The settings made in the SkLineScan® program are automatically provided to the device feature list of any Gen<I>Cam compliant software.

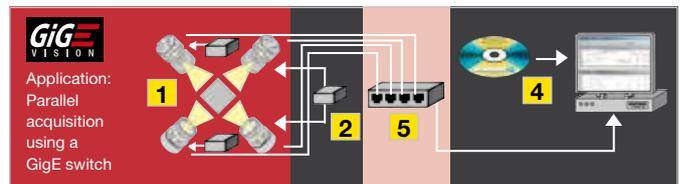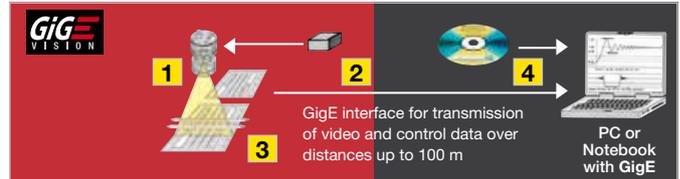

- | | | | |
|---|----------------------|---|---|
| 1 | CCD line scan camera | 4 | Software GEN<I>CAM
-compliant, eBus driver |
| 2 | Power supply | 5 | GigE switch |
| 3 | Illumination | | |

The Gen<I>Cam™ standard provides a generic programming interface for all kinds of cameras and, no matter what features they implement, the application programming interface (API) always remains the same. The Gen<I>Cam™ standard consists of multiple modules relevant to the main tasks to be solved:

GenApi: for configuring the camera

Standard Feature Naming Convention (SFNC): recommended names and types for common features

GenTL: transport layer interface, for grabbing images

For more information on the GigE Vision™ specification, see:

<https://www.visiononline.org/vision-standards-details.cfm?type=5>


or the Gen<I>Cam™ standard:

<http://www.emva.org/standards-technology/genicam/>

1.2 System Setup at a Glance

- red: SK2048VHA-4 scope of delivery
- blue: accessories for minimum system configuration
- black: optional accessories

For accessory order details see *Accessories (p. 34)*.

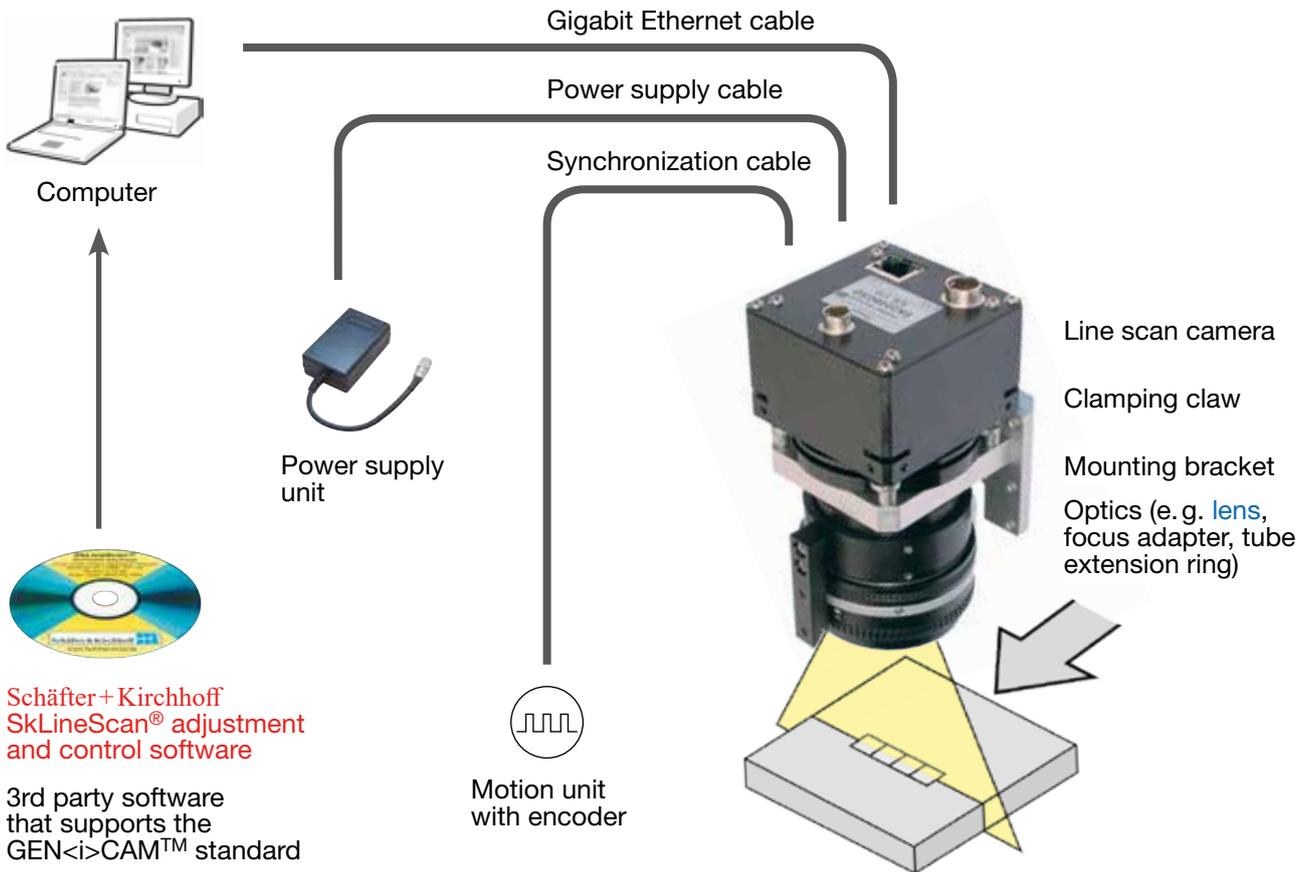

1.3 Computer System Requirements

- Intel Pentium Dual Core or AMD equivalent
- RAM min. 4GB, depending on size of acquired images
- High-performance video card, PCIe bus
- Operating Systems:
Windows 7 / 8.1 / 10 (64 or 32-bit) or
Linux kernel 3.13 or higher
- CD/DVD drive for software installation.

Network Adapter:

- Any Gigabit Ethernet network adapter as a card or on the motherboard is suitable. For the best performance, a network interface card (NIC) with Intel PRO/1000 chip is recommended.
- PCIe adapters outperform PCI adapters.
- Network adapters that support Jumbo Frames outperform adapters with fixed packet-size frames.

1.4 SK2048VHA-4 Line Scan Camera - Specifications

Sensor category	CCD Monochrome Sensor
Sensor type	S12379
Pixel number	2048
Pixel size (width x length)	8 x 8 μm^2
Pixel spacing	8 μm
Active sensor length	16.38 mm
Anti blooming	x
Integration control	x
Shading correction	x
Threshold detection	-
Line synchronization modes	Line Sync, Line Start, Exposure Start, Exposure Active
Frame synchronization	x
Pixel frequency	120 / 60 MHz
Maximum line frequency	52.63 kHz
Integration time	0.01 ... 20 ms
Dynamic range	1:2500 (rms)
Spectral range	200 ... 1000 nm
Video signal	monochrome 8/12 Bit digital
Interface	GigE Vision
Voltage	18 - 36 V DC
Power consumption	5.4 W
Casing	65 mm x 65 mm x 71.1 mm (Case type BG1)
Objective mount	C-Mount
Flange focal length	17.53 mm
Weight	0.3 kg
Operating temperature	+5 ... +45°C

2 Installation and Setup

2.1 Mechanical Installation: Mounting Options and Dimensions


Mounting Options

- The best fixing point of the camera is the collar for the mounting bracket SK5105-L (available as an accessory).
- Four threaded holes M3x6.5mm provide further options for customized brackets.
- The length and weight of the optics might be beyond the capability of the standard mounting bracket SK5105-L. For this purpose, a second mounting bracket type SK5105-2L to hold the tube extension ring(s) is more appropriate.


Optics Handling

- If the camera and the optics are ordered as a kit, the components are pre-assembled and shipped as one unit. Keep the protective cap on the lens until the mechanical installation is finished.
- If you must expose the sensor or lens surface, ensure the environment is as dust-free as possible.
- Gently blow off loose particles using clean compressed air.
- The sensor and lens surfaces can be cleaned with a soft tissue moistened with water or a water-based glass cleaner.

Casing type BG1

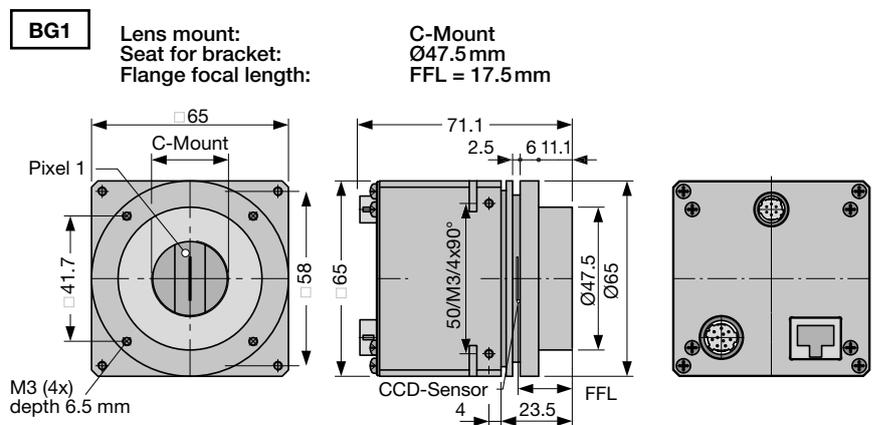

Mounting bracket SK5105-L

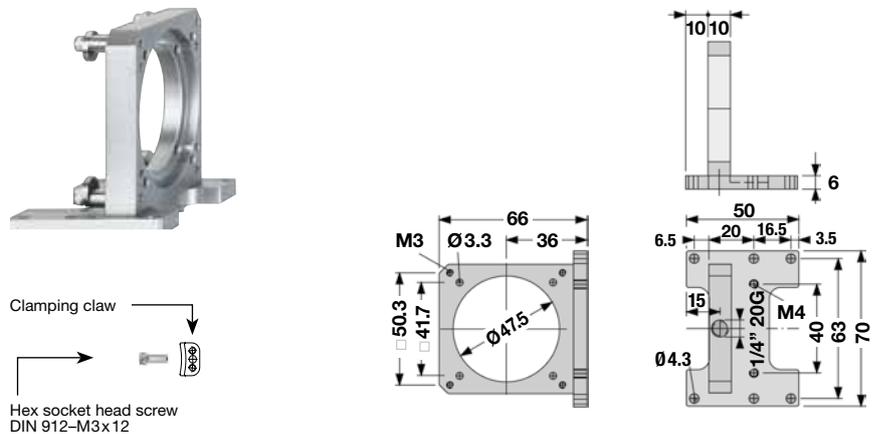


Clamping set SK5101

Set of 4 pcs. clamping claws
incl. screws


Mounting system SK5105-2L

for cameras with a tube
extension > 52 mm

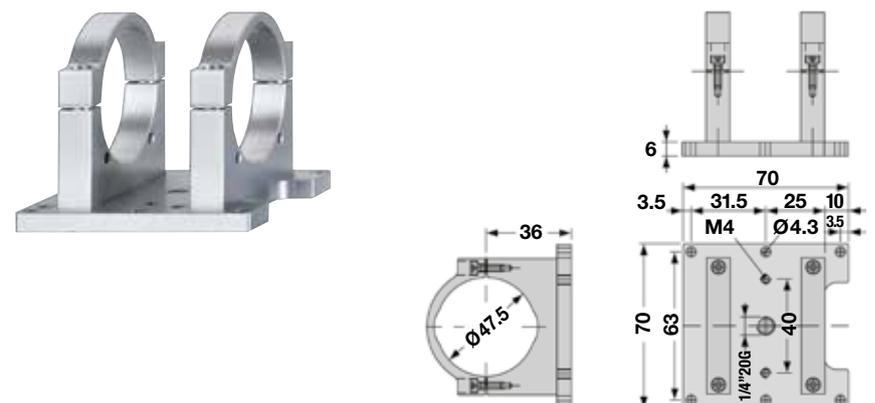


2.2 Electrical Installation: Connections and I/O Signals

- For the SK2048VHA-4 line scan camera-data transfer and camera control is provided by the Gigabit Ethernet interface **3**. Use a CAT6 twisted-pair cable to connect the camera to a PC; the maximum cable length is 100 m.
- The operating power must be supplied by an external source using socket **1**
- If you want to operate the camera in FREE RUN trigger mode, the connections are complete with the CAT6 Ethernet cable and the connection to an external power supply.
- For any kind of synchronized operation, the external trigger signal(s) must be wired to socket **2** as well. A frame-synchronization signal and two separate line-synchronization signals can be handled. The various trigger modes are described fully in section *Synchronization of the Image Acquisition with the Feed Rate of the Object* (p. 18)

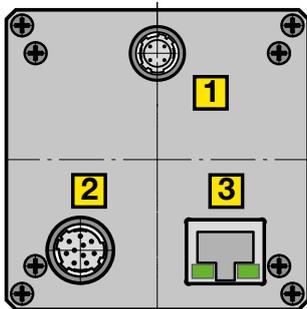

1 Power +24V

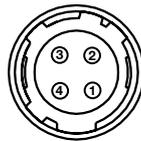


Hirose series 10A, male 4-pin

Pin	Signal	Pin	Signal
1	n.c.	3	n.c.
2	GND	4	min. +18 V max. +36 V

Total power: 5.4 W

2 I/O Connector

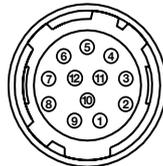

Hirose series 10A, male 12-pin

Pin	Signal *)
1	GND
8	FrameSync IN
10	LineSync A IN
6	LineSync B IN

*) Signal Specification (TTL)

Max. input frequency	16.5 MHz
Input voltage, absolute max. range	min -0.5 V max 7.0 V
Input voltage max. low	0.99 V
Input voltage min. high	2.31 V
Input current	10 µA

3 Data

RJ-45 connector for Gigabit Ethernet cable

Status indicators

Network connection speed

- off no connection, 10 Mbyte/s connection, or 100 Mbyte/s connection
- on 1 Gbyte/s connection



Network activity

- off no connection
- on connected
- flash light data is being transmitted or received

Accessories (see also Accessories (p. 34):

Power Cable SK9014.xF

Use this cable to feed external supply voltage into socket **1**.

Connector:

Hirose plug HR10A, female 4 pin (camera side), open cable end (other side)

Length 1.5 m (standard), 3 m, or 5 m

Network Cable CAT6.x

For connecting socket **3** with the PC Ethernet interface. Both ends with RJ45 connectors.

External Synchronization Cable SK9024.x

Use this cable to feed external synchronization signals into socket **2**.

Connectors:

Hirose plug HR10A, female 12 pin (camera side)
Phoenix 6 pin connector incl. terminal block (for synchronization signals)

Length 3 m or 5 m. Other lengths on request.

2.3 GigE Connections and Software Installation

The SK2048VHA-4 GigE Vision™ line scan camera uses the Gigabit Ethernet communication protocol, which is 100% compliant with the GigE Vision™ specifications and the Gen<I>Cam™ standard.

The Gen<I>Cam™ standard provides a generic programming interface for all kinds of cameras and, no matter what features they implement, the application programming interface (API) always remains the same.

For software and Network Interface Controller (NIC) driver installation, the following possibilities apply:

1. The Gen<I>Cam™ compliant 3rd party software you want to install includes a particular filter driver for the NIC.
 - ➔ Install the software package. Commonly this will also cover the driver installation.
2. The 3rd party software does not include a NIC filter driver, and your NIC has an INTEL PRO/100 chip.
 - ➔ Install the Pleora eBUS Optimal Driver.
3. The 3rd party software does not include a NIC filter driver, and your NIC has a different chip.
 - ➔ Keep the manufacturer driver and follow the instructions in the next section.

The Pleora eBUS driver installation tool is available from Schäfter + Kirchhoff either on CD or as download from <http://www.sukhamburg.com/supporte.html>

GigE Network Integration for Standard GigE Network Adapters



This section is relevant for systems with a standard NIC (not INTEL PRO/1000) in combination with the manufacturer driver (case 3).

a) Subnet Setting

The GigE Vision camera has an enforced static IP address. The NIC IP address must be part of the same subnet otherwise the camera is not accessible.

An example of a persistent IP address that is assigned to a class B network is:

Persistent IP = 169.254.35.10
 Subnet Mask = 255.255.0.0
 Default Gateway = 0.0.0.0

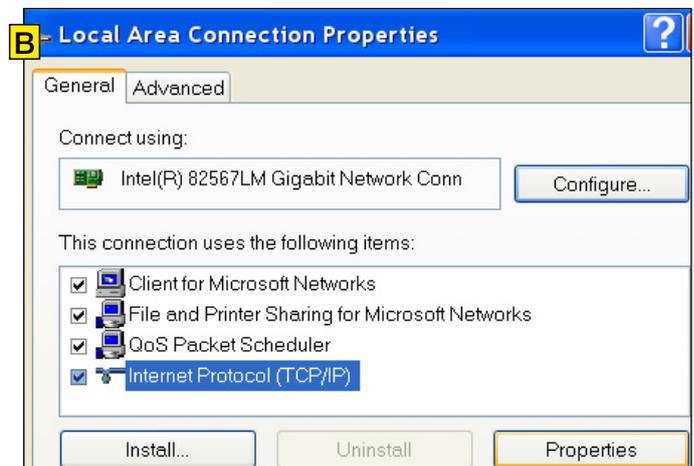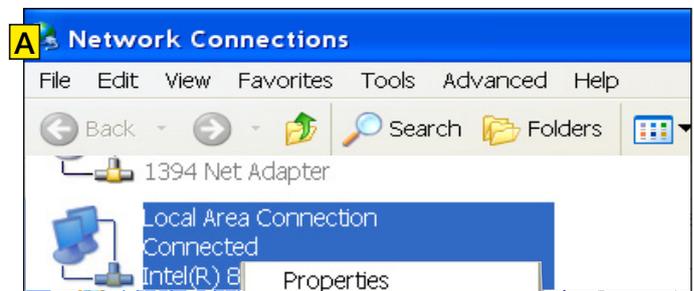

To Set the NIC IP address:
 Start > Control Panel > Network Connections.

A Right-click Local Area Connection and select Properties. The Local Area Connection Properties dialog appears.

B Select Internet Protocol (TCP/IP) and click Properties. The Internet Protocol (TCP/IP) Properties dialog appears.


C Enable "Use the following IP address" and enter the following settings:

IP address:	169.254.35.10
Subnet mask:	255.255.0.0
Default gateway:	leave blank

Ensure these do not conflict with an existing IP address on another NIC. For multiple dedicated connections on the same host PC, increment the third IP address by one for each NIC (i.e. 36, 37, etc., subnet 255.255.255.0 - class C). Click OK to close the Internet Protocol (TCP/IP) Properties dialog.

Click Close to close the Local Area Connection Properties dialog.

Your NIC is now configured for a dedicated connection.

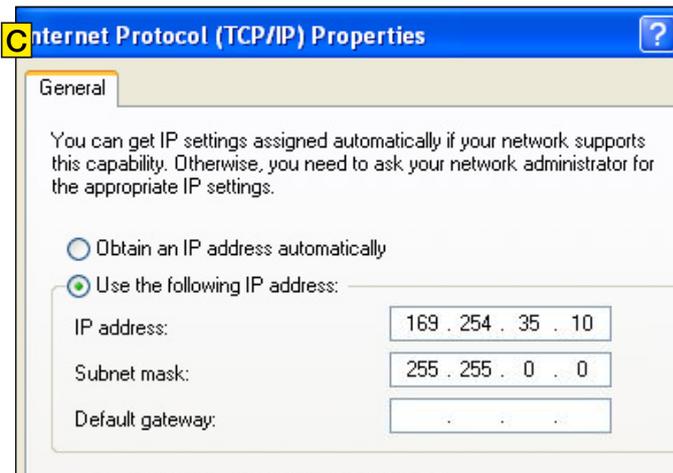b) Windows Firewall

a) Switch off the Windows Firewall or


b) Allow an exception:

- Start > Control Panel > Open the Windows Firewall
- Select the Exceptions tab
- Click Add Program
- The "Add a Program" dialog appears
- Select the camera control program and click "OK"
- Click "OK" to close the Windows Firewall dialog

c) Optimizing the Network Adapter Settings

Open the "Advanced" Properties tab **D** of the Network Adapter and enter the following values:

Jumbo Frames	9014 Bytes
Receive Descriptors	2048
Interrupt Moderation Rate	extreme
Energy Efficient Ethernet	OFF

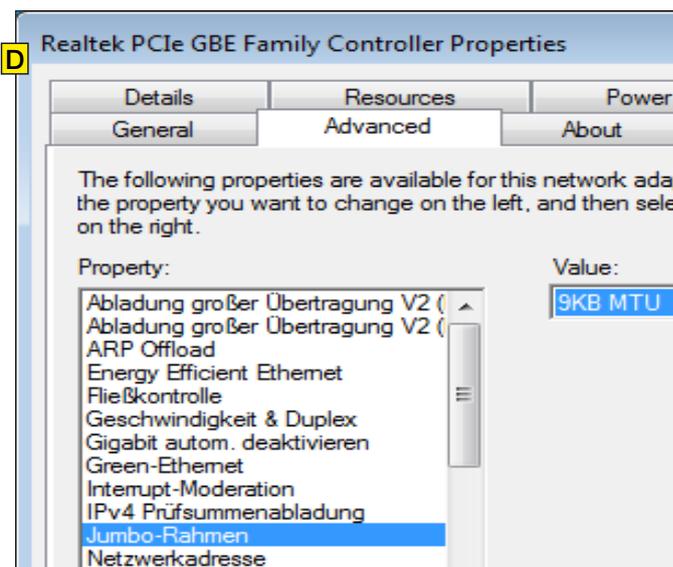

Network Controller Properties: Note, the terms can differ depending on the installed Ethernet card and driver.

2.4 SkLineScan Software Installation (Optional)

This section is a quick reference for installing the **SkLineScan** adjustment and configuration software. SkLineScan and the SkLineScan manual is provided for download on the Schäfter+Kirchhoff website under <http://www.sukhamburg.com/supporte.html>.

SkLineScan Installation

Prior to the installation, power on the PC (not the camera) and unpack the downloaded zip-file to a temporary folder. Alternatively, if your installation medium is a CD, insert the disk into the drive.

The autostart function may launch the setup program automatically from CD. Otherwise, look for the installation file:

SkLineScan_GEV.msi


Then start the applicable installation file manually. This will set up the Schäfter + Kirchhoff **SkLineScan** camera control and adjustment tool.

SkLineScan Start-up

- Start SkLineScan. A start-up dialog box pops up and displays the connected cameras that have been automatically detected.



Desktop Icon

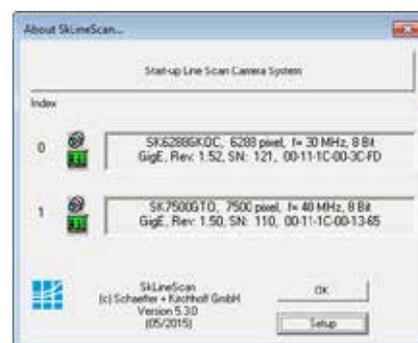

Camera Setup

Use the Setup dialog for

- activating/deactivating a connected GigE camera (activated device is ticked)
- changing the IP address
- changing the pixel frequency
- setting the bit depth of the video signal to 8 or 12-bit.




SkLineScan Setup dialog

The MAC addresses are displayed for identification of each camera with the defined CamID (0, 1, ...). This is useful when several cameras with the same name are connected.

Initial Function Test

- Quit the SkLineScan startup dialog box.
- Select "OK" in the SkLineScan start-up dialog.

The Signal Window plotting the current brightness versus the pixel number indicates the correct installation.

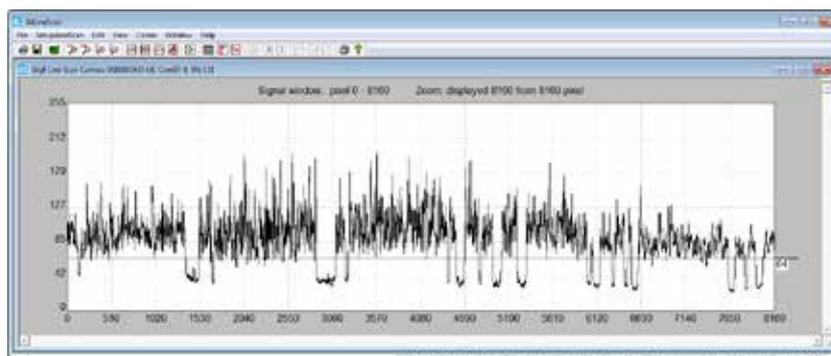

Instruction Manual SK2048VHA-4 | shared_installation-Software_GigE_Vred1

3 Camera Control and Performing a Scan

3.1 Software: SkLineScan

This section is a brief introduction to the SkLineScan adjustment and configuration software. A more detailed description is provided in the separate SkLineScan manual. The pdf is included in the SkLineScan installation package or is available for download from the Schäfter+Kirchhoff website under <http://www.sukhamburg.com/supporte.html>.

Detailed instructions on how to obtain optimal image data and use the data with the Schäfter+Kirchhoff software package can be found in the *SkLineScan Software Manual*.


The most common functions of the line scan camera can be controlled by menu items and dialog boxes.

In the "Camera Gain / Offset Control" dialog there is a command line for entering further control commands.

Click on the desktop icon to start the **SkLineScan** program.

The SkLineScan program recognizes the connected line scan cameras automatically. The identified cameras are shown in the start-up dialog **A**.

If the SK2048VHA-4 camera is identified correctly, confirm with "OK". The "Signal window" graphically showing the intensity signals of the sensor pixels (oscilloscope display) will open. It is responsive in real-time and the zoom function can be used to highlight an area of interest. The oscilloscope display is ideally suited for parameterizing the camera, for evaluating object illumination, for focussing the image or for aligning the line scan camera correctly.

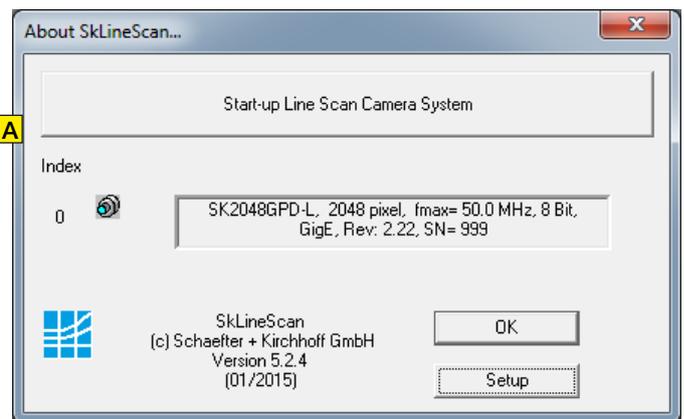

SkLineScan: Start-up dialog

Function Overview: SkLineScan Toolbar



SkLineScan: Toolbar



New line scan. All open "Signal window" windows will be closed. [F2]



"Camera Control" dialog for parameter settings: integration time, line frequency, synchronization mode, thresholding



Zooming in and out



New line scan. "Area Scan" windows will be closed, "Signal window" windows will remain open. [F2]



Threshold mode in new binary signal window.



"Shading Correction" dialog to adjust the white balance [Alt + s]



"Gain/Offset Control" dialog, also for commands input [Shif+F4]




New area scan

■ Visualization of the Sensor Output

- **Signal Window / Oscilloscope Display**

The signal window plots the digitalized brightness profile as signal intensity (y-axis) versus the sensor length (x-axis) at a high refresh rate. The scaling of the y-axis depends on the resolution of the A/D converter: The scale range is from 0 to 255 for 8-bits and from 0 to 4095 for 12-bits. The scaling of the x-axis corresponds with the number of pixels in the line sensor.

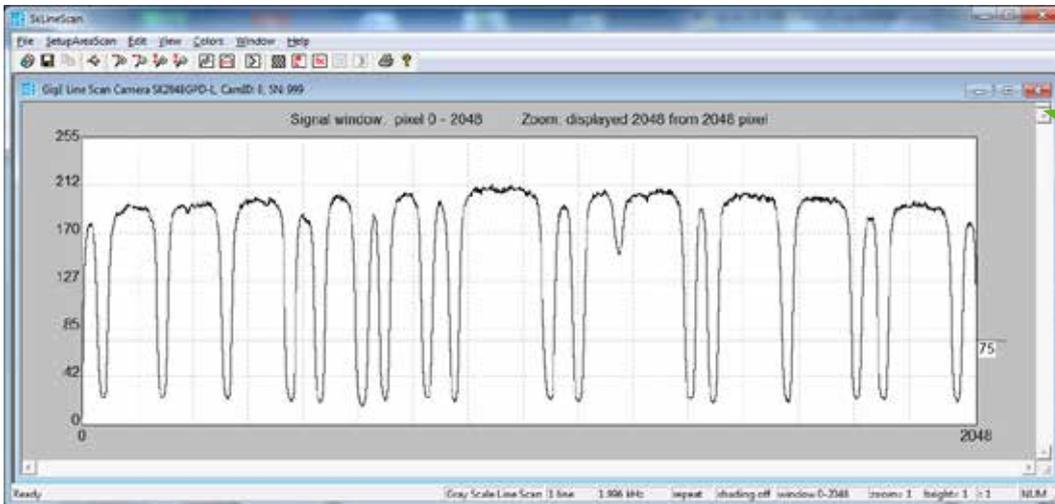


Line scan in Signal Window: brightness vs. pixel number

- **Zoom Function**  

With a high number of sensor pixels, details are lost due to the limited number of display pixels. With the zoom function you select a part of the sensor for the detailed display. The possible magnification ranges up to the representation of the intensity signal of individual pixels.

- **Window Split Function**

The signal window can be divided horizontally into two areas. Use the slider **B** at the top of the vertical scroll bar. If you then use the zoom function in one frame, the selected section in the other frame will be highlighted in yellow.

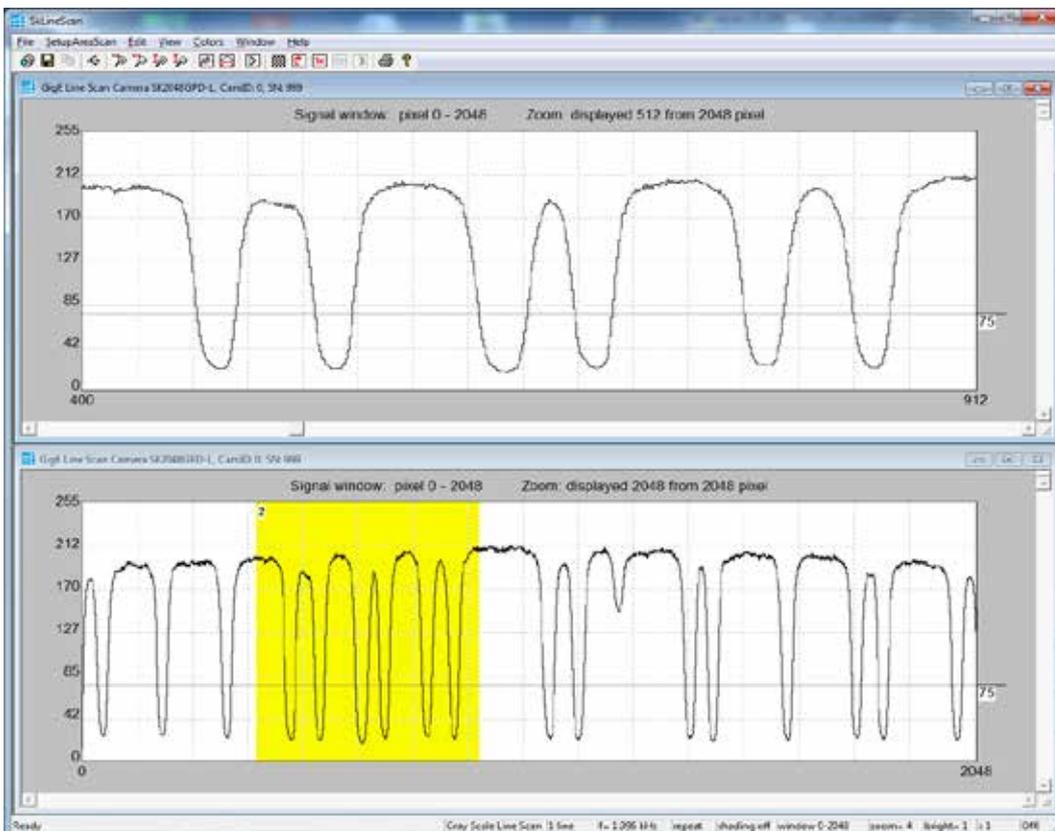

Line scan in split signal window: The upper frame shows an enlarged section of the lower frame.

3.2 Adjustments for Optimum Scan Results

Prior to a scan, the following adjustments and parameter settings should be considered for optimum scan signals:

- Lens focussing
- Sensor alignment
- Gain/Offset
- Shading correction
- Integration time
- Synchronization of the sensor exposure and the object surface velocity, trigger mode options.



Start with the signal window / oscilloscope display. Any changes in the optical system or camera parameters are displayed in real-time when using an open dialog box.

■ Lens Focussing

The real time Signal Window facilitates the effective focussing of the line scan camera system, even for two-dimensional measurement tasks. For determining the correct focus, the edge steepness at dark-bright transitions and the modulation of the line scan signal are the most important factors.



Adjust the focus with the aperture fully open to limit the depth of field and enhance the effects of changing the working distance.

If the sensor is overloaded when the aperture is fully open, the easiest way to reduce the signal amplitude is to shorten the integration time, as described in section *Optimum brightness adjustment, Integration Time (p. 17)*.

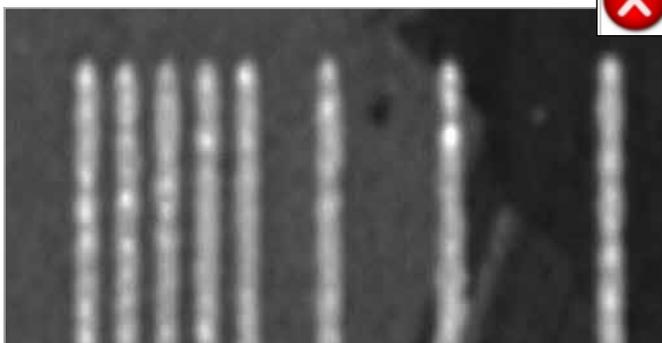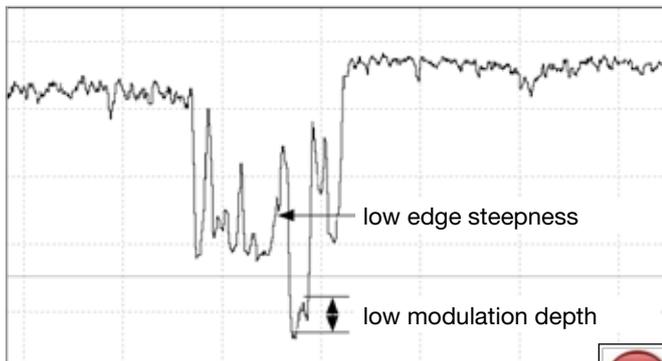

Out-of-focus:

- Low edge steepness
- Signal peaks are blurred
- High spatial frequencies with low modulation depth

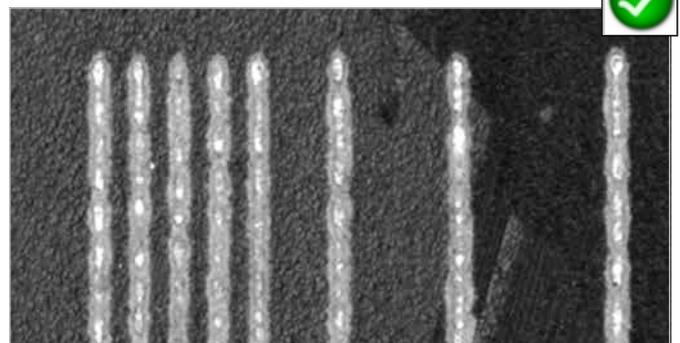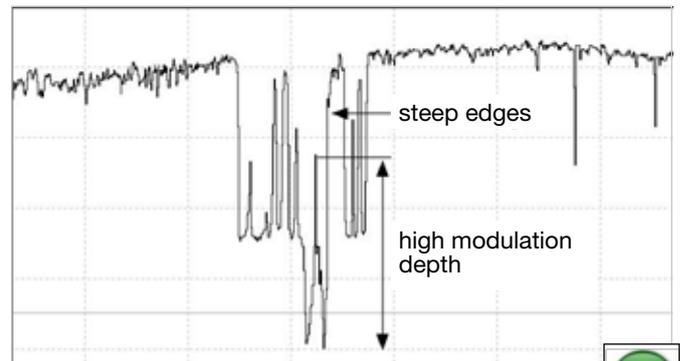


Optimum focus:


- Dark-bright transitions with steep edges
- Large modulation in the signal peaks
- High spatial frequencies with high modulation depth

■ Sensor Alignment

If you are using a linear light source, check the alignment of the light source and sensor before shading correction, as rotating the line sensor will result in asymmetric vignetting.

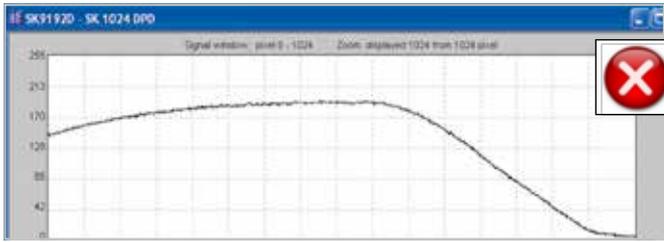


Sensor and line lighting slightly twisted in relation to each other, asymmetric vignetting

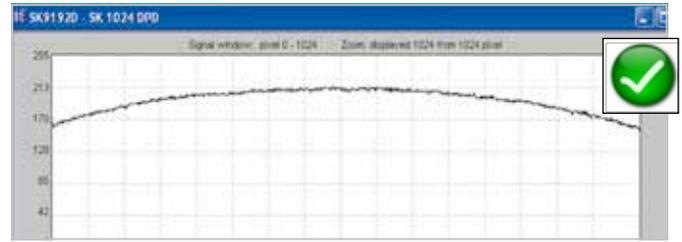

Sensor and line lighting aligned in parallel, symmetric vignetting

■ Gain/Offset Adjustment

The cameras are supplied with factory-set gain/offset. Open the "Gain/Offset Control" dialog to adjust these settings.

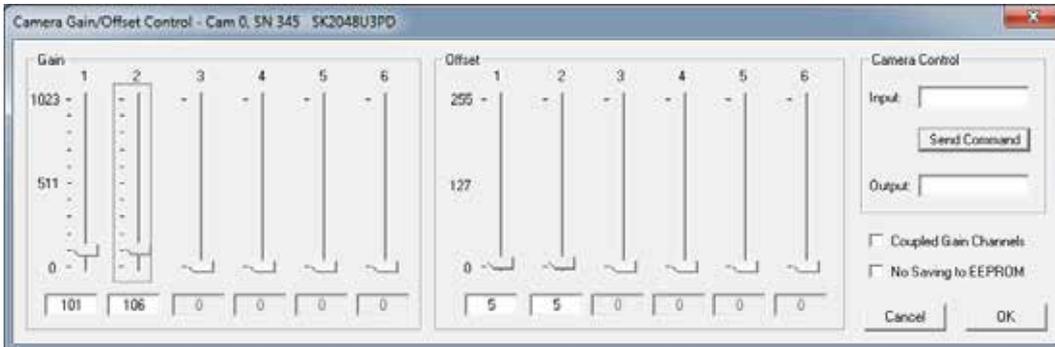

Gain/Offset Control dialog

The gain/offset dialog contains up to 6 sliders for altering gain and offset. The number of active sliders depends on the individual number of adjustable gain/offset channels of the camera. If "Coupled Gain Channels" is checked, all channels are set synchronously with one slider.

Enter commands for advanced software functions in the 'Camera Control' field (see page 14).

Adjustment principle

1. Offset

To adjust the zero baseline of the video signal, totally block the incident light and enter "00" (volts) for channel 1.

For a two- or multi-channel sensor, minimize any differences between the channels by adjusting the other Offset sliders.


A slight signal noise should be visible in the zero baseline.

2. Gain

Illuminate the sensor with a slight overexposure in order to identify the maximum clipping. Use the Gain slider "1" to adjust the maximum output voltage.

For a two- or multi-channel sensor, minimize any differences between the channels by adjusting the other Gain sliders.

For the full 8-bit resolution of the camera, the maximum output voltage is set to 255 and for 12-bit is set to 4095.

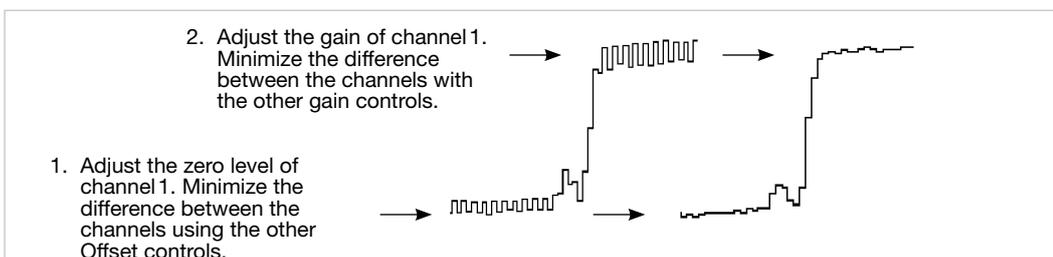


Offset and gain adjustment for more than one gain/offset channel

■ Shading Correction

Shading correction compensates for non-uniform illumination, lens vignetting as well as any differences in pixel sensitivity. The signal of a white homogeneous background is used as a reference. For correction, each pixel of the sensor is scaled to the intensity maximum with an individual factor (255 at 8 bit resolution and 4095 at 12 bit). The reference signal is stored in the camera's Shading Correction Memory (SCM). Subsequent scans are normalized with the scaling factors of this white reference.

- Open the "Shading Correction" dialog (Alt+s).

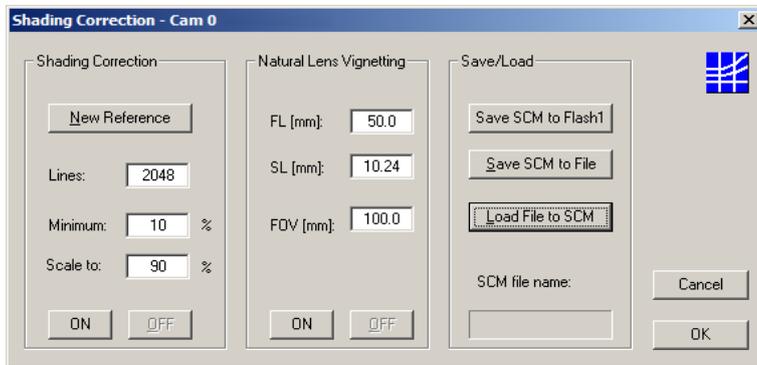

Shading Correction dialog

- Use a homogeneous white object to capture the reference data, e.g. a white sheet of paper.
- Either take a 2-dimensional scan ("Area Scan Function" [F3]) or

use a single line signal that was averaged over a number of single line scans.

- To suppress influences of the surface structure, move the displayed object during image acquisition.
- Input the scale range:

Minimum in %: intensity values lower than "Minimum" will not be changed.

A typical appropriate value is 10% of the full intensity range, i.e. 26 (= 10% · 255) for an 8-bit intensity scale.

Maximum in %: target value for scaling

A typical appropriate value is 90% of the full intensity range. The result will be a homogeneous line at 230 (= 90% · 255) for an 8-bit intensity scale.

- Click on button **New Reference**
- Click on **Save SCM to Flash** to save the SCM reference signal in the flash memory of the camera

Once the reference signal is copied from the shading correction memory (SCM) to the camera flash memory it will persist even after a power down.

On a re-start, this data will be restored from the flash memory back to the SCM.

The current shading correction status - active or not active - is also retained after power down.

ON Activate shading correction with the reference signal stored in the SCM.

OFF Switch off Shading Correction. The shading correction data will not be loaded from the flash memory into the SCM the next time the camera is started - even if the SCM data was previously stored in the flash memory.


Load File to SCM A stored reference signal is loaded into the SCM of the camera. Shading correction is then active.



After shading correction, the line scan signal has a homogeneous intensity at 255 (8 bit, Maximum 100%)

Shading Correction Memories and API Functions

As an alternative to the user dialog, a new shading correction reference signal can also be generated using API (Application Programming Interface) functions. The relationship between the memory locations and the related API functions are shown in the following figure. The API functions are included in the SK91USB3-WIN software package. For more information, refer to the *SK91USB3-WIN manual*.

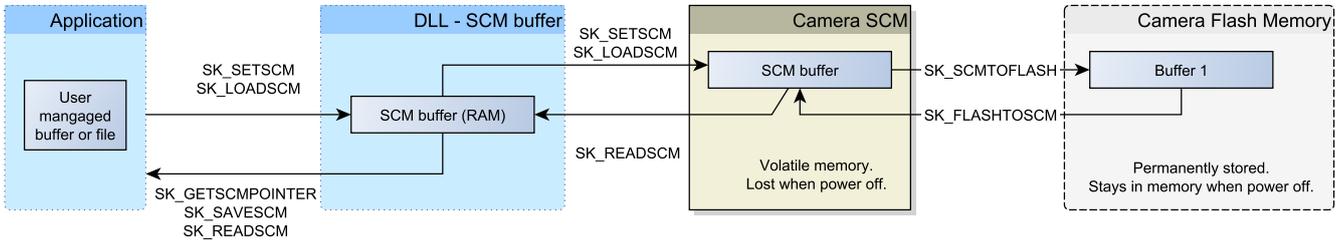

Structure of the shading correction memories (SCM) and the related API functions for memory handling

■ Optimum brightness adjustment, Integration Time


The brightness distribution of the line signal is influenced not only by the integration time, but also by the illumination and the aperture setting. It should be noted that the aperture setting affects the depth of field and thus the overall quality of the image.

The line signal is optimal if the signal from the brightest area of the object corresponds to 95% of the maximum output value. At 8-bit digitizing depth, 256 brightness levels are available, at 12-bit 4096. In this setting, optimum signal sensitivity is achieved and overexposure or even blooming is avoided.

Open the **Camera Control** dialog.

Menu *Edit* -> *Operation Parameters* or **[F4]**

- The integration time can be set by two vertical sliders or two input fields in the section **Integration Time** of this dialog. The left slider is for coarser the right for finer adjustments.
- The current line frequency is displayed in the **Line Frequency** status field.
- For cameras with integration control function (shutter), it is possible to shorten the integration time without increasing the line frequency. This integration control mode is activated as soon as the maximum line frequency of the camera is reached by shortening the integration time or by checking **Decoupl. LF** and thus the integration time is decoupled from the line frequency.

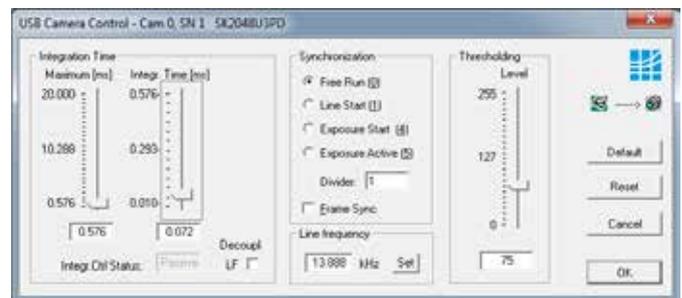

SkLineScan Camera Control dialog


The **Default** button sets the integration time to the minimum exposure period that is determined from the maximum line frequency.

Reset restores the start values.


Cancel closes the dialog without changes.

OK stores the integration time values and closes the dialog.

For synchronization settings, see section *Synchronization of the Image Acquisition with the Feed Rate of the Object* (p. 18).

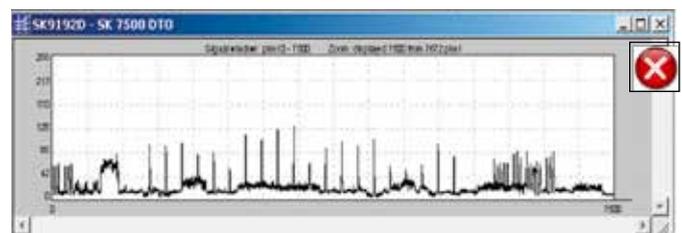

A camera signal with insufficient level: The integration time is too short, since only about 50% of the gray levels are used.

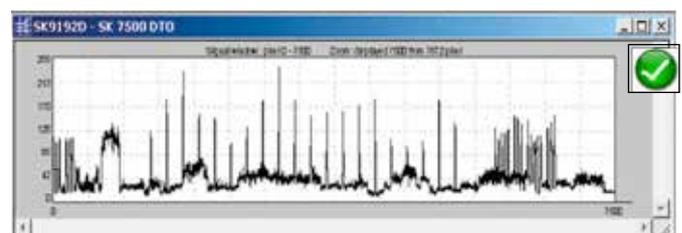


Optimized level of the camera signal after increasing the integration time by a factor of 4 to 95 % of the available scale.

■ Synchronization of the Image Acquisition with the Feed Rate of the Object

A line scan camera produces a two-dimensional image by moving either the object or the camera. The direction of the translation movement must be orthogonal to the sensor axis of the line scan camera.

In order to obtain an image with the correct aspect ratio, a line synchronous feed is required. With RGB color sensors, the color sequence of the individual sensor lines must also be taken into account when processing the sensor data. The software development kits from Schäfter+Kirchhoff contain easy-to-use functions for this purpose.

If the object speed is variable or the accuracy requirements are high, external synchronization is required. The various synchronization modes are described in the next section.

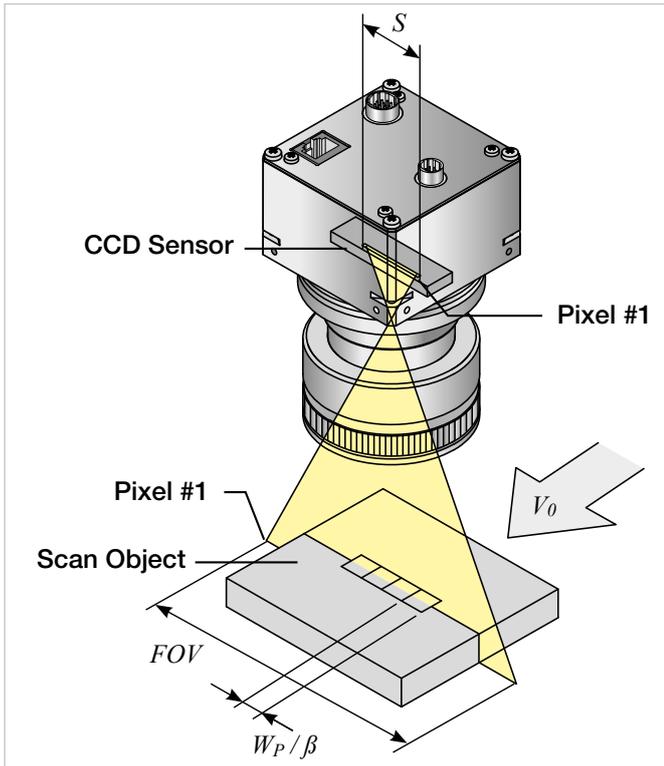

The optimal scan speed for a given line frequency is calculated as follows:

$$V_O = \frac{W_P \cdot f_L}{\beta}$$

If the scanning speed is fixed, the line frequency must be adjusted accordingly in order to obtain the correct aspect ratio in the image:

$$f_L = \frac{V_O \cdot \beta}{W_P}$$

- V_O = object scan velocity
- W_P = pixel width
- f_L = line frequency
- S = sensor length
- FOV = field of view
- β = magnification factor
- = S / FOV

Example 1:

Calculating the scan velocity for a given field of view and a given line frequency:

- Pixel width = 8 μ m
- Line frequency = 52.63 kHz
- S = 16.38 mm
- FOV = 30 mm

$$V_O = \frac{8 \mu\text{m} \cdot 52.63 \text{ kHz}}{(16.38 \text{ mm} / 30 \text{ mm})} = 771 \text{ mm/s}$$

Example 2:

Calculating the line frequency for a given field of view and object scan velocity:

- Pixel width = 8 μ m
- Scan velocity = 700 mm/s
- S = 16.38 mm
- FOV = 30 mm

$$f_L = \frac{700 \text{ mm/s} \cdot (16.38 \text{ mm} / 30 \text{ mm})}{8 \mu\text{m}} = 47.8 \text{ kHz}$$

■ Synchronization Modes

The synchronization mode determines the exact timing of the exposure. Synchronization can either be performed internally or triggered by an external source, e.g. an encoder signal.

There are two different synchronization functions that can be applied together or individually:

1. Line synchronization:

The falling edge of a TTL signal at the LINE SYNC A input triggers each individual exposure of the sensor line by line.

The SK2048VHA-4 line scan camera enables extended synchronization control by means of a second trigger input LINE SYNC B. A detailed description can be found under *Advanced Synchronization Control*, p. 26.

2. Frame synchronization:

The recording of a set of lines (frame) representing a two-dimensional image is started by the falling edge of a TTL signal at the FRAME SYNC input.

Free Run / SK Mode 0

The acquisition of each line is synchronized internally (free-running) and the next scan is started automatically after completion of the previous line scan. The line frequency is determined by the programmed value.

LineStart / SK Mode 1

After an external trigger pulse, the currently exposed line is read out at the next internal line clock. The start and duration of the exposure are controlled internally by the camera and are not affected by the trigger pulse. The exposure time is programmable. The line frequency is determined by the frequency of the trigger signal.

Limitations: The period of the trigger signal must be longer than the exposure time used. Between the external trigger signal and the internally generated line clock, jitter occurs in the range of the exposure time.

ExposureStart / SK Mode 4 (only available when camera supports integration control)

A new exposure is started exactly at the point in time of the external trigger pulse. The exposure time is determined by the programmed value. The exposed line is read out after the exposure time has elapsed. The frequency of the trigger signal determines the line frequency.


Restriction: The period duration of the trigger signal must be longer than the exposure time used.

ExposureActive / SK extSOS (Mode 5)

The exposure time and the line frequency are controlled by the external trigger signal. This affects both the start of a new exposure (Start of Scan-Pulse, SOS) and the readout of the previously exposed line.


FrameTrigger / SK FrameSync

The camera suppresses the data transfer until a falling edge of a TTL signal occurs at the FRAME SYNC input. This starts the acquisition of a 2D area scan. The number of image lines must be programmed in advance. Any of the available line synchronization modes can be used for the individual line scans.

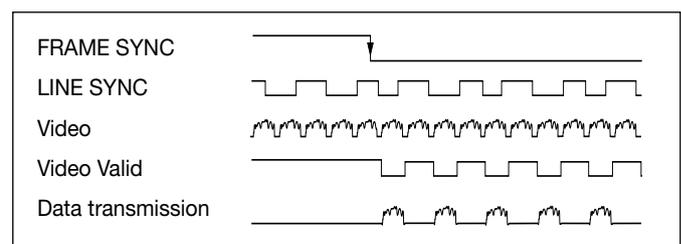


Combined frame and line synchronization

- To configure synchronization, open the **Camera Control** dialog. [F4]
- Within the **Synchronization** frame, select one of the numbered line synchronization modes.
- Within the camera, the trigger control stage is followed by a divider stage with which the trigger frequency can be divided by integer dividers. Enter the division ratio in the **Divider** field.
- Select the **Frame Sync** check box to activate frame synchronization. In the **Delay** field, enter the delay time in milliseconds.

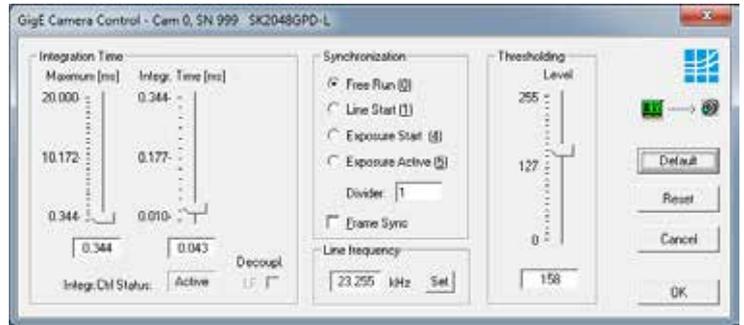

Camera Control dialog

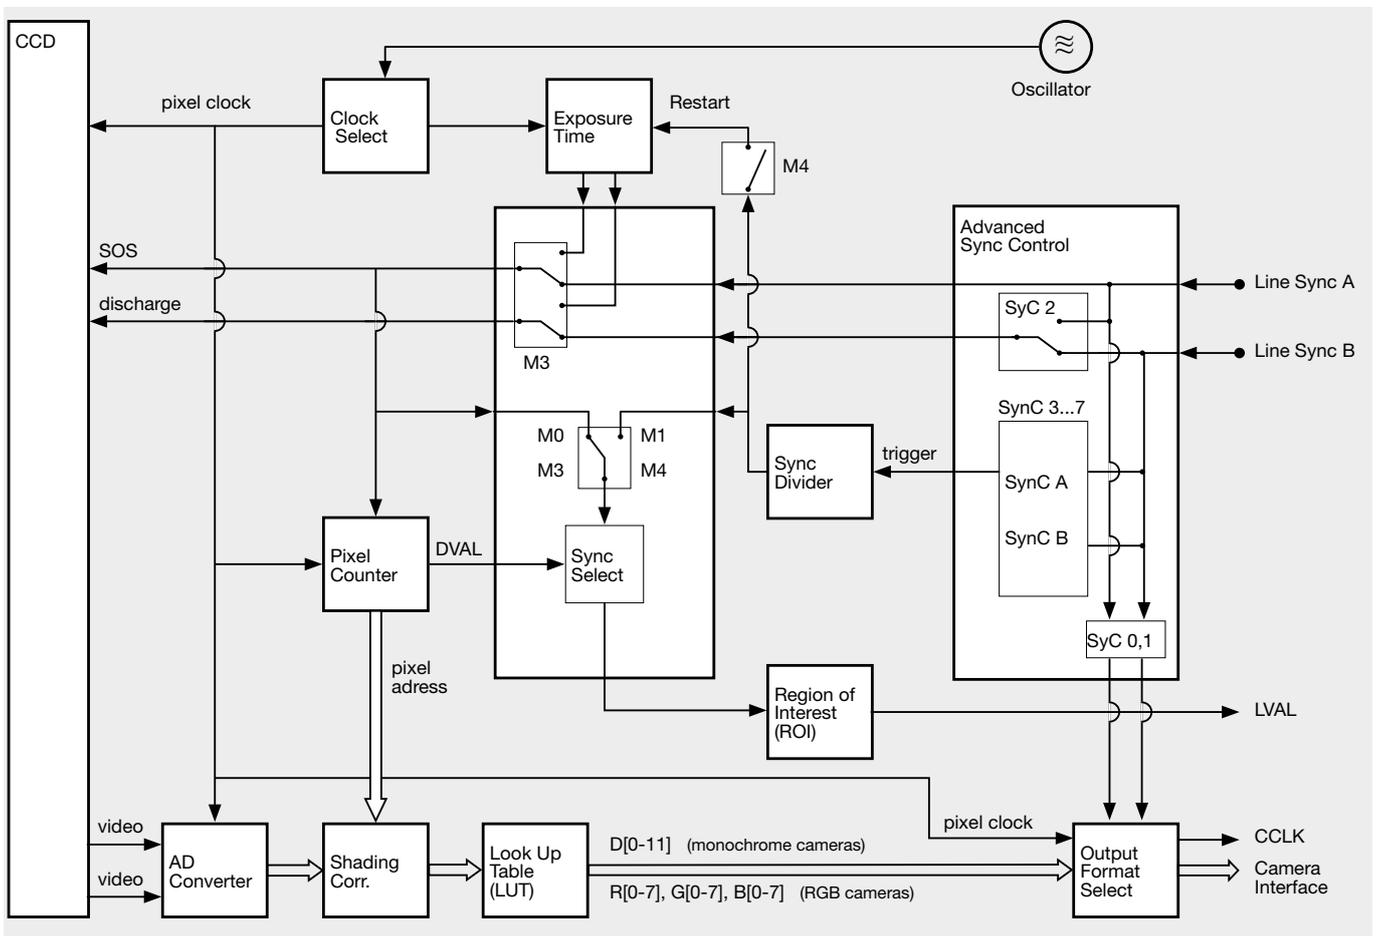

Functional diagram of the Camera Control System

Camera Control and Performing a Scan


Instruction Manual SK2048VHA-4 | shared_CameraControl(BB)_Sync-Modes_GigE_V_USB3_ML.indd

3.3 GigE Vision Device Feature List (Gen<i>Cam compliant)

a) Device Information


Display of device information, not editable.

 Data in this dialog are editable, if they are not greyed out. Some data can only be edited as long as acquisition is stopped.

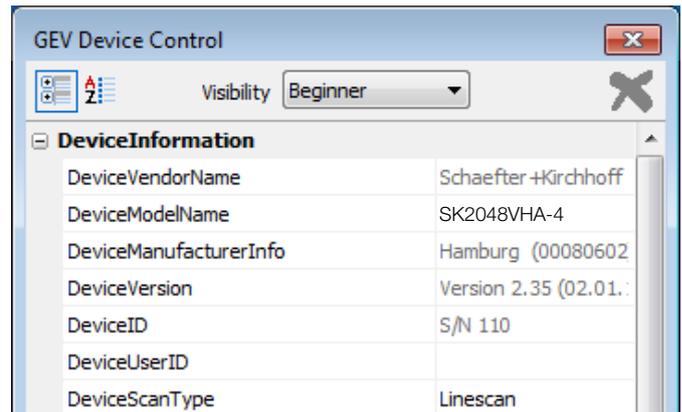


b) Image Size Control

- SensorWidth:** number of pixels in line sensor (fixed)
- SensorHeight:** 1 (fixed)
- Width:** image width = SensorWidth (fixed)
- Height:** image height (number of lines per image)
 - 1 for Line Scanning
 - ≥2 for Area Scanning, limited by 32 MByte buffer size
- PixelFormat:**
 - Mono8 = gray scale 8-bit
 - Mono10 = gray scale 10-bit
 - Mono12 = gray scale 12-bit
- PixelSize:** bits per pixel, depends on PixelFormat
 - Mono8: PixelSize = Bpp8 = 8-bit
 - Mono10: PixelSize = Bpp16 = 16-bit
 - Mono12: PixelSize = Bpp16 = 16-bit

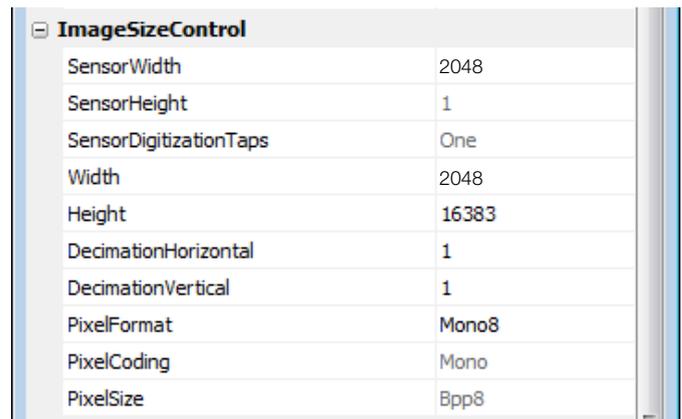

c) Acquisition And Trigger Controls


- AcquisitionMode:**
 - Continuous: repetitive acquisition
 - SingleFrame: one snapshot
- AcquisitionLineRateAbs:** line rate in Hz
 - minimum: 50 Hz
 - maximum: 52630 Hz
- Trigger Selector:** for line synchronization
 - FreeRun: each line is acquired, no trigger
 - LineStart: external trigger, reading in next line
 - ExposureStart: external trigger and restart exposure
 - ExposureActive: exposure time is determined by the external trigger period
- ExposureTimeRaw:** exposure time in μs, 10 ... 20000 (master feature of exposure control)
- ExposureTimeAbs:** exposure time in ms, 0.01 ... 20

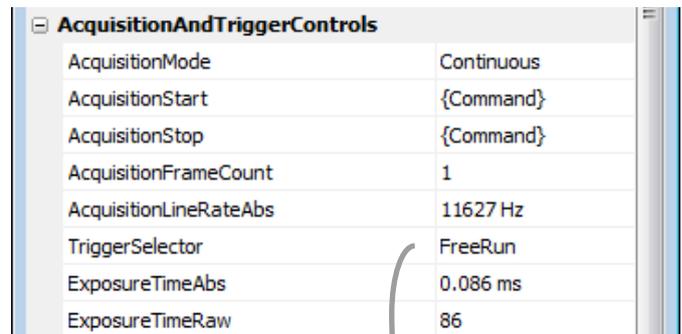

See *Synchronization Modes* (p. 20)

d) Analog Controls (Gain / Offset)

- GainSelector:** gain control for all taps or for each tap separately
- GainRaw:** gain adjustment
 - range: 0 ... 1023, typical 70 (integer)
 - (master feature of gain control)
- GainAbs:** gain adjustment in dB
 - range: 0 ... 24.0 (float)
- BlackLevelSelector:** offset control for for all taps or for each tap separately
- BlackLevelRaw:** offset adjustment
 - range: 0 ... 255 (integer)

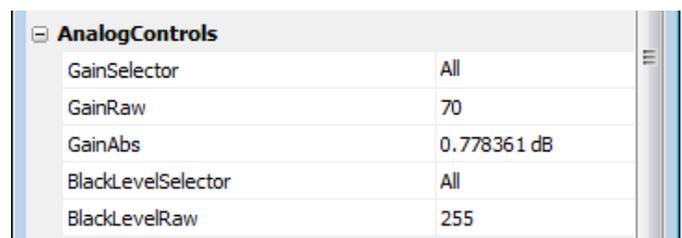

See *Gain/Offset Adjustment* (p. 15)

e) Custom Features, Beginner view

SkGetPixFrequencyHigh: returns the high pixel frequency in kHz

SkGetPixFrequencyLow: returns the low pixel frequency in kHz

SkSetPixelFrequency: sets the pixel frequency in kHz (low or high) with reciprocal effect on line frequency.
For lower line frequencies, a low value for pixel frequency is recommended.

SkSetShadingCorrection: ON: activates Shading Correction
OFF: deactivates Shading Correction
See *White Balance and Shading Correction (p. 16)*.

SkGetMaxLineFrequency: returns the maximum line rate in Hz

SkGetMinExposureTime: returns the minimum exposure time in microseconds

SkFrameTrigger: selects "Frame Sync" for external trigger of images
True: Frame Trigger is active
FALSE: Frame Trigger is off
The Frame Trigger works with all Line Trigger modes.
See *Synchronization Modes (p. 20)*.

SkGetVideoChannels: returns the number of taps for gain / offset control

SkGetSerialNumber: returns the serial number of the camera

SkGetRevisionNumber: returns the revision number for the camera

SkSyncControl: Sync Control Register setting, see *Advanced Trigger Functions and Sync Control Register (SCR) Settings (p. 26)*.



SkSyncDivider: incoming trigger clock divider (integer)

f) Additional Custom Features, Guru view

SkShadCorrReference: a single line scan is acquired using a white background and saved in the Shading Correction Memory (SCM). For each pixel, a correction factor is calculated for adjusting the intensity to the maximum (255 at Mono8). When Shading Correction is active then all of following scans are normalized using this factor.

SkSaveScmToFlash: writes the Shading Correction Memory factors into the non-volatile flash memory of the camera, allowing use of the SCM even after a complete shut down or loss of power.

SkTestPattern: switch on test pattern, turns off with power off

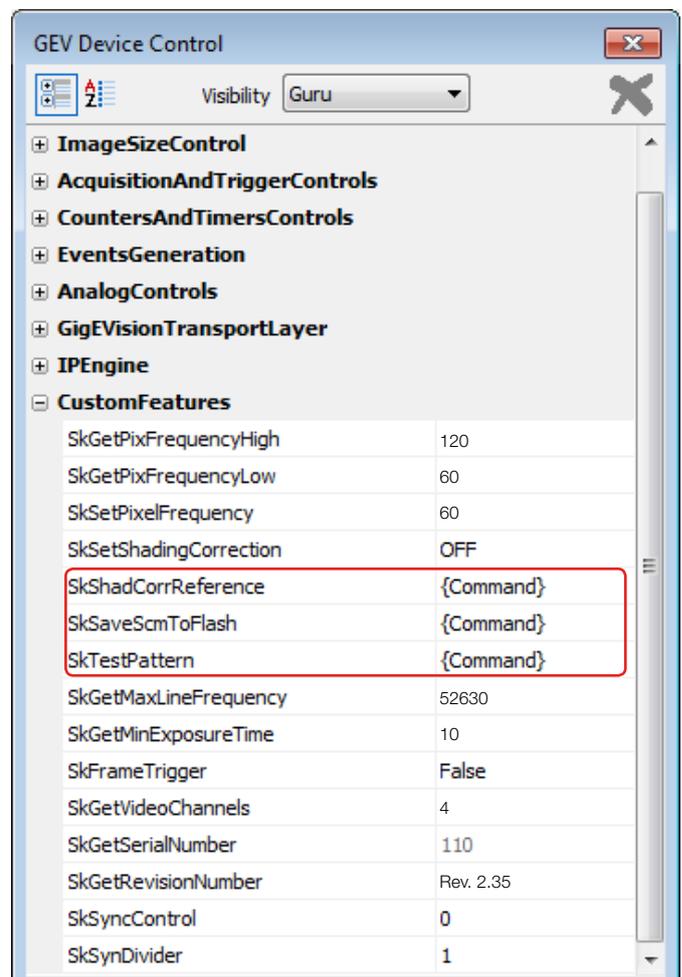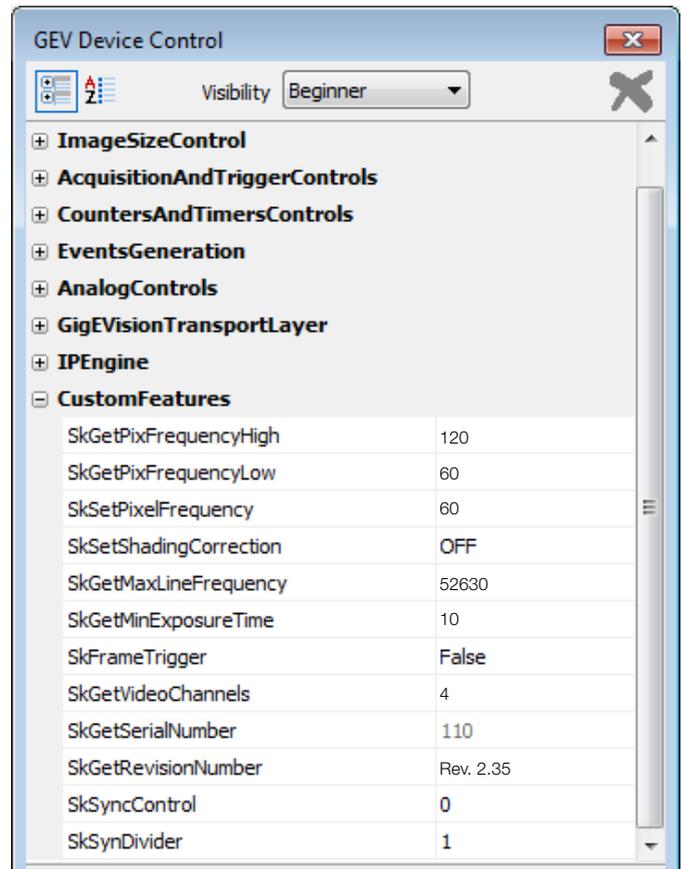

4 Advanced Camera Control Functions


4.1 Camera Control by Commands

In addition to user dialog inputs, the SkLineScan software also provides the option to adjust camera settings, such as gain, offset, trigger modes, by sending control commands directly.

Similarly, current parameters, as well as specific product information, can be read from the camera using the request commands. All set and request commands are listed in the tables below.

- The commands are entered in the 'Input' field in the 'Camera Control' section of the "Camera Gain/Offset Control" user dialog, [Shift+F4].
- In the 'Output' field, either the acknowledgement of the set commands (0=OK, 1=not OK) or the return values of the request commands are output.

The parameter settings are stored in the non-volatile flash memory of the camera and are available after a rapid start-up, even after a complete shut down or loss of power.

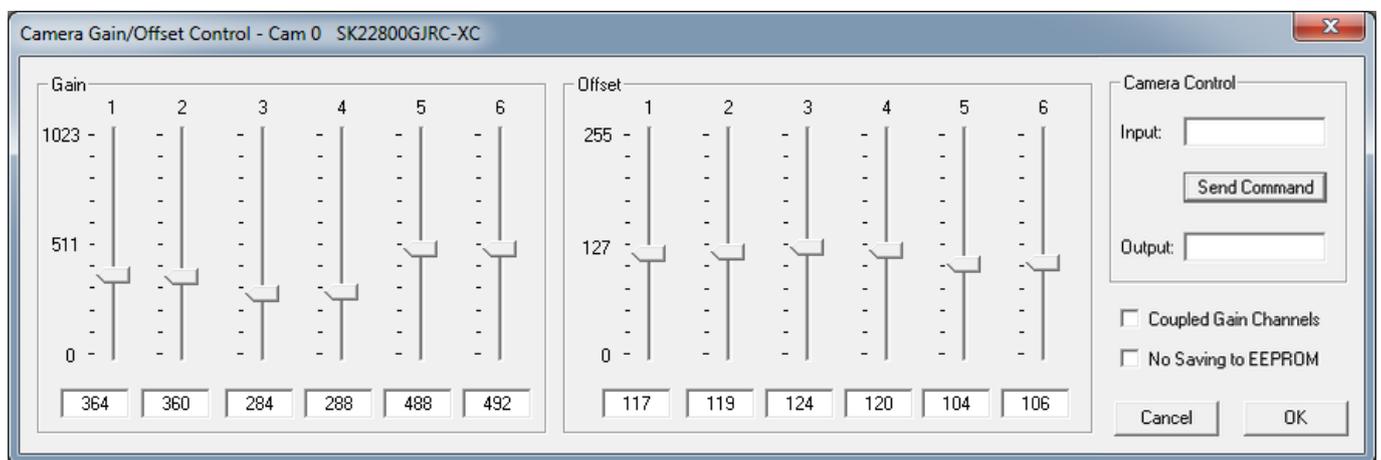

Gain/Offset Control dialog: Camera Control input and output in the right section

■ Set Commands

Set Operation	Description
Goooo<CR>	gain 1 setting 0-24 dB
Boooo<CR>	gain 2 setting 0-24 dB
Hoooo<CR>	gain 3 setting 0-24 dB
Joost<CR>	gain 4 setting 0-24 dB
Oppp<CR>	offset 1 setting
Pppp<CR>	offset 2 setting
Qppp<CR>	offset 3 setting
Uppp<CR>	offset 4 setting
F8<CR>	output format: 8 bit output data
F10<CR>	output format: 10 bit output data
F12<CR>	output format: 12 bit output data
C120<CR>	camera clock: 120 MHz data rate
C60<CR>	camera clock: 60 MHz data rate
T0<CR>	test pattern off / SCM off
T1<CR>	test pattern on (turns off with power off)
T2<CR>	shading correction on
T3<CR>	auto program Shading Correction / SCM on
T4<CR>	copy flash memory 1 to SCM
T5<CR>	save SCM to flash memory 1
T6<CR>	video out = SCM data
T7<CR>	copy Flash Memory 2 to LUT Memory
T8<CR>	save LUT Memory to Flash Memory 2
T9<CR>	output data = LUT data
M0<CR>	line trigger mode0: internal all lines
M1<CR>	line trigger mode1: extern trigger, next line
M2<CR>	line trigger mode0: internal all lines and set max line rate
M3<CR>	Pleora sync modes
M4<CR>	line trigger mode4: extern trigger and restart
M5<CR>	line trigger mode5: extern SOS, all lines
Axxxx<CR>	SCM address (xxxx = A0-A2047) or LUTM (xxxx = A32768-A36863)
Dxxxx<CR>	Memory data (xxxx = 0-4095), increment memory address counter
Eyyyyy<CR>	frames / multiframe (yyyyy = 0-32767)
EFyyyyy<CR>	external frame trigger delay (yyyyy = 0-32767 lines)
Nyyyyy<CR>	lines / frame (yyyyy = 1-32767)
Wyyyyy<CR>	line clock frequency (yyyyy = 50-52630) [Hz]
WLyyyyy<CR>	Window Pixel length (yyyyy = 1-Line length)
WFyyyyy<CR>	Window First Pixel (yyyyy = 1-Line length)
Xyyyyy<CR>	exposure time (yyyyy = 10-20000) [μs]
Vyyyyy<CR>	extern sync divider (yyyyy = 1-32767)
Yppp<CR>	set sync control (ppp = 255)
SDXT<CR>	enable DXT (decoupling of line clock frequency and exposure time)
RDXT<CR>	disable DXT (decoupling of line clock frequency and exposure time)

Acknowledgement for all set commands:
0 = OK, 1 = not OK

SLUT<CR>	enable LUT
RLUT<CR>	disable LUT
SNES<CR>	enable NES (no EEPROM save)
RNES<CR>	disable NES (no EEPROM save)
RESET<CR>	reset Memory to manufacturer default

■ Request Commands

Request	Return	Description
K<CR>	SK2048VHA-4	returns SK type number
R<CR>	Rev. 2.35	returns Revision number
S<CR>	SNr00163	returns Serial number
I<CR>	SK2048VHA-4 Rev. 2.35 SNr00163	camera identification readout
I1<CR>	VCC: yyyyy	returns VCC (1=10mV)
I2<CR>	VDD: yyyyy	returns VDD (1=10mV)
I3<CR>	moo: yyyyy	returns mode of operation
I4<CR>	CLo: yyyyy	returns camera clock low frequency (MHz)
I5<CR>	CHi: yyyyy	returns camera clock high frequency (MHz)
I6<CR>	Ga: yyyyy	returns gain 1
I7<CR>	Ga2: yyyyy	returns gain 2
I8<CR>	Of: yyyyy	returns offset 1
I9<CR>	Of2: yyyyy	returns offset 2
I10<CR>	Ga3 yyyyy	returns gain 3
I11<CR>	Ga4 yyyyy	returns gain 4
I12<CR>	Of3: yyyyy	returns offset 3
I13<CR>	Of4: yyyyy	returns offset 4
I19<CR>	Tab: yyyyy	returns number of video channels
I20<CR>	CLK: yyyyy	returns selected clock frequency (MHz)
I21<CR>	ODF: yyyyy	returns selected output data format
I22<CR>	TRM: yyyyy	returns selected trigger mode
I23<CR>	SCO: yyyyy	returns shading corr. on/off
I24<CR>	Exp: yyyyy	returns exposure time
I25<CR>	miX: yyyyy	returns min. exposure time (μs)
I26<CR>	LCK: yyyyy	returns line frequency (Hz)
I27<CR>	maZ: yyyyy	returns max. line frequency (Hz)
I28<CR>	TSc: yyyyy	returns Sync Divider
I29<CR>	SyC: yyyyy	returns Sync Control
I30<CR>	Lin: yyyyy	returns Lines/Frame
I31<CR>	DXT: yyyyy	returns DXT on/off
I32<CR>	Tmp: yyyyy	returns Video Board Temper.
I33<CR>	FSD: yyyyy	returns Frame Trigger Delay
I36<CR>	WPL: yyyyy	returns Window Pixel Length
I37<CR>	WFP: yyyyy	returns Window First Pixel
I38<CR>	LUT: yyyyy	returns LUT on/off
I39<CR>	KST: yyyyy	returns Status

LUT: Lookup Table
SCM: Shading Correction Memory
SOS: Start of Scan

Range of values:
oooo = 0 ... 1023
ppp = 0 ... 255
xxxx = 4 digits integer value as ASCII
yyyyy = 5 digits integer value as ASCII

4.2 Advanced Synchronization Control

The basic synchronization function makes use of the trigger input LINE SYNC A. The trigger mode is determined by the settings in the 'Camera Control' dialog, e.g. LineStart (1) or ExposureStart (4).

Advanced trigger functions are provided by combining LINE SYNC A with a second trigger input LINE SYNC B. The operation mode is controlled by the entries in the **Sync Control Register (SCR)**.

Control commands to write to or to read from the Sync Control Register:

Yppp<CR> set SCR with ppp = 0...255 (decimal)
 Return value: 0 = OK; 1 = not OK

I29<CR> return sync control
 Return value: SyC:yyyyy (5-digits integer value as ASCII)

Example:

Y232
 ppp = 232(dec) = 11101000(bin)
 new SCR value: 11101000 → **E**

Advanced Trigger Functions and Sync Control Register (SCR) Settings

- Basic synchronization function, 'Camera Control' dialog settings are valid → **A**
- Detection of direction → **B, C, D, E**
- Trigger pulses are valid only in one direction, trigger pulses in the other direction are ignored → **B**
- Trigger on 4 edges → **D, E**
- Suppression of jitter in the encoder signal, programmable hysteresis for trigger control → **E**

Sync Control Register (SCR)	SyC7	SyC6	SyC5	SyC4	SyC3	SyC2	SyC1	SyC0
default	x	x	x	x	x	x	0	0
pixel #1 data = external trigger input states	x	x	x	x	x	x	0	1
pixel #1 data = Linecounter (8 bit)	x	x	x	x	x	x	1	0
pixel #1, #2 data = ext. trigger states (3 bit) + line counter (13 bit)	x	x	x	x	x	x	1	1
ExSOS and Sync at LINE SYNC A (Mode5)	x	x	x	x	x	0	x	x
ExSOS at LINE SYNC B, Sync at LINE SYNC A (Mode5)	x	x	x	x	x	1	x	x
Jitter Hysteresis off	x	x	x	0	0	x	x	x
Jitter Hysteresis 4	x	x	x	0	1	x	x	x
Jitter Hysteresis 16	x	x	x	1	0	x	x	x
Jitter Hysteresis 64	x	x	x	1	1	x	x	x
Sync 1x Enable	x	x	0	x	x	x	x	x
Sync 4x Enable	x	x	1	x	x	x	x	x
Sync up Enable / down disable	x	0	x	x	x	x	x	x
Sync up/down Enable	x	1	x	x	x	x	x	x
Sync Ctrl. Disable, SyC3...SyC6 without function	0	x	x	x	x	x	x	x
Sync Control Enable	1	x	x	x	x	x	x	x
	128	64	32	16	8	4	2	1

For diagnostic purposes, the present state of external trigger inputs (LINE SYNC A, LINE SYNC B, FRAME SYNC) or the internal line counter can be output instead of pixel #1 and/or pixel #2 data.






SCR	Pixel #1 Data (lowByte)	Pixel #2 Data (lowByte)
xxxxxx00	intensity	intensity
xxxxxx01	D7 = FRAME SYNC D6 = LINE SYNC A D5 = LINE SYNC B D4 ... D0 = 0	intensity
xxxxxx10	internal line counter (8 bit)	intensity
xxxxxx11	D7 = FRAME SYNC D6 = LINE SYNC A D5 = LINE SYNC B D4 ... D0 = line counter (bit 12 ... 8)	internal line counter (bit 7 ... 0)

■ Example Timing Diagrams

Annotations:

- SyncA = LINE SYNC A (external line synchronization input, I/O connector)
- SyncB = LINE SYNC B (external line synchronization input, I/O connector)
- Count = internal counter
- Trigger = Generated trigger pulses from the Trigger Control stage. The signal goes to the Trigger Divider stage inside the camera. For setting the divider, use the Vyyyyy<CR> command or the 'Divider' input field in the **4.1 Camera Control by Commands (p. 20)**.

- 1) direction changed
- 2) glitch

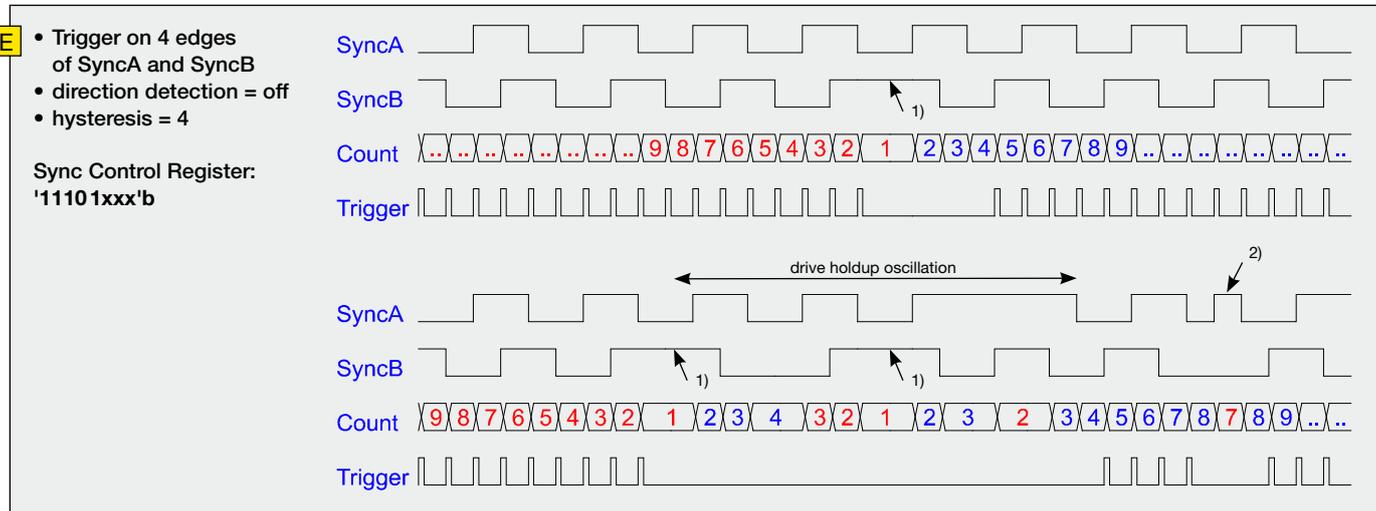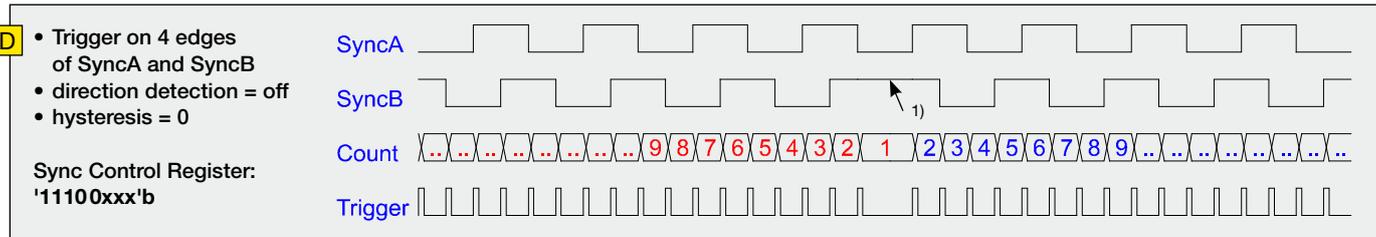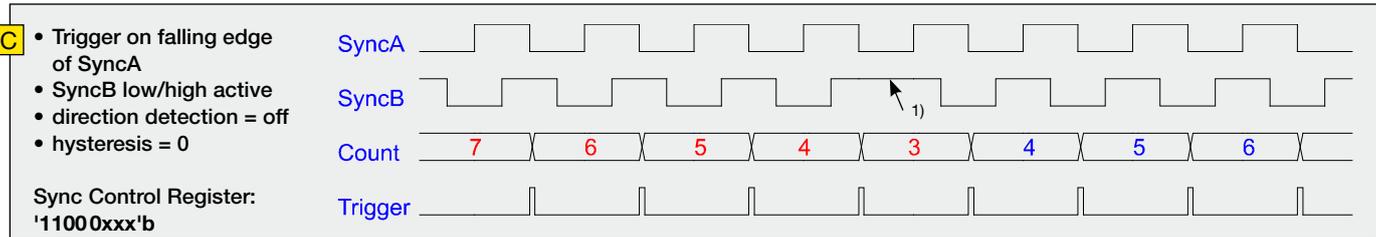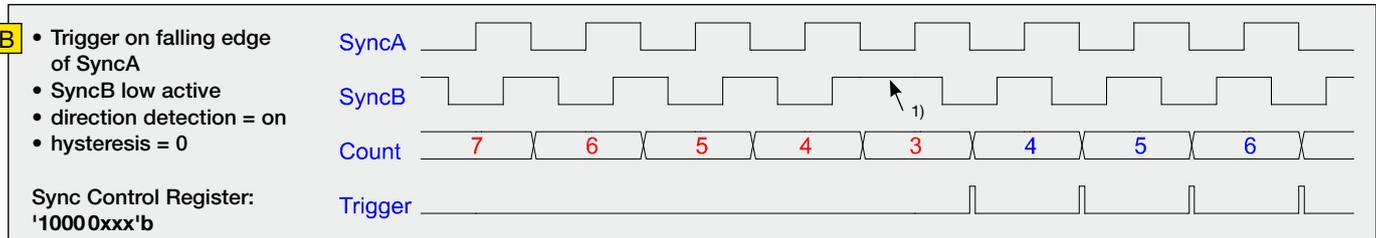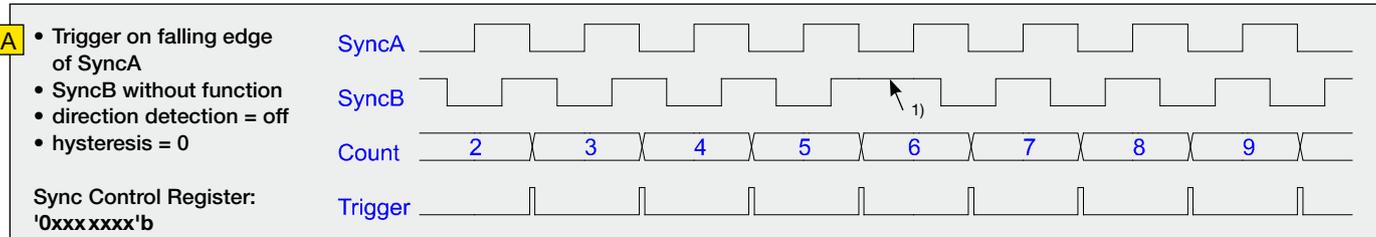

Instruction Manual SK2048VHA-4 | shared_CameraControl@_Advanced-Sync-Chr_ML.indd

5 Sensor information

Manufacturer: Hamamatsu
 Type: S12379
 Data source: Hamamatsu CMOS linear image sensor S12379
 Cat. No. KMPD1149E01 Feb. 2015 DN

Features

- 2048 pixels, pixel size: 8 x 8 μm²
- High-speed multiport readout, readout speed: 40 MHz max. x 4 ports
- High CCD node sensitivity: 21 μV/e⁻ typ.
- Anti-blooming function




Application

- Machine vision
- High-speed image readout

Device structure

Parameter	Specification	Unit
Image size (H x V)	16.384 x 0.008	mm
Pixel size (H x V)	8 x 8	μm
Total number of pixels	2104	-
Number of effective pixels	2048	-
Fill factor	100	%
Horizontal clock	2-phase	-
Output circuit	3-stage MOSFET source follower	-
Package	24-pin ceramic DIP	-
Window material	Quartz glass*1	-

*1: Resin sealing

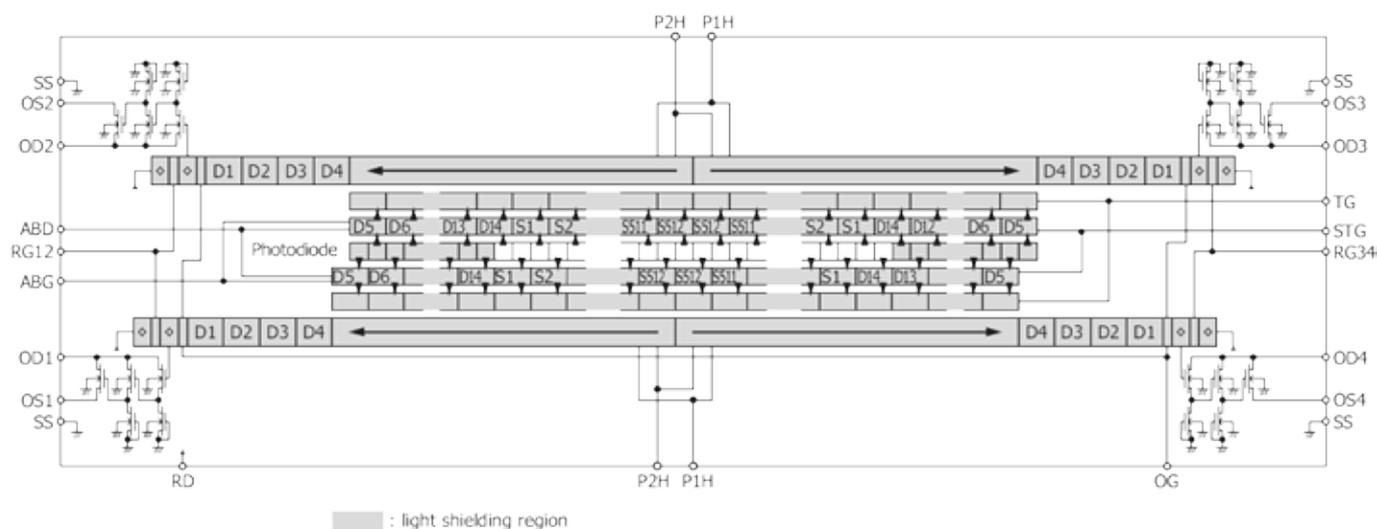

Schematic of CCD chip

Electrical and optical characteristics

Ta = 25 °C, operating conditions: Typ., unless otherwise noted

Parameter	Symbol	Min.	Typ.	Max.	Unit
Saturation output voltage	Vsat	-	Fw × Sv	-	V
Saturation charge*5	Fw	15	20	-	ke ⁻
CCD node sensitivity	Sv	19	21	23	μV/e ⁻
Dark current*6	Average of all effective pixels	Dsave	30	100	e ⁻ /ms
	Maximum among all effective pixels	DSmax	40	100	
Readout noise*7	Nr	-	20	30	e ⁻ rms
Dynamic range*8	DR	600	1000	-	-
Spectral response range	λ	-	200 to 1000	-	nm
Photoresponse nonuniformity*9 *10	PRNU	-	±3	±10	%
Image lag*9 *11	L	-	0.1	1	%

*5: Saturation charge is within linearity ± 2%.

*6: Dark current is halved when cooled by 5 to 7 °C.

*7: Readout frequency 40 MHz


*8: Dynamic range = saturation charge/readout noise

*9: Measured at half the saturation output using an LED light (peak emission wavelength: 470 nm)


*10: Photoresponse nonuniformity = $\frac{\text{Fixed pattern noise (peak to peak)}}{\text{Signal}} \times 100 [\%]$

*11: Percentage of unread signal level when a light pulse is directed so that the output is half the saturation output

Spectral response (without window)

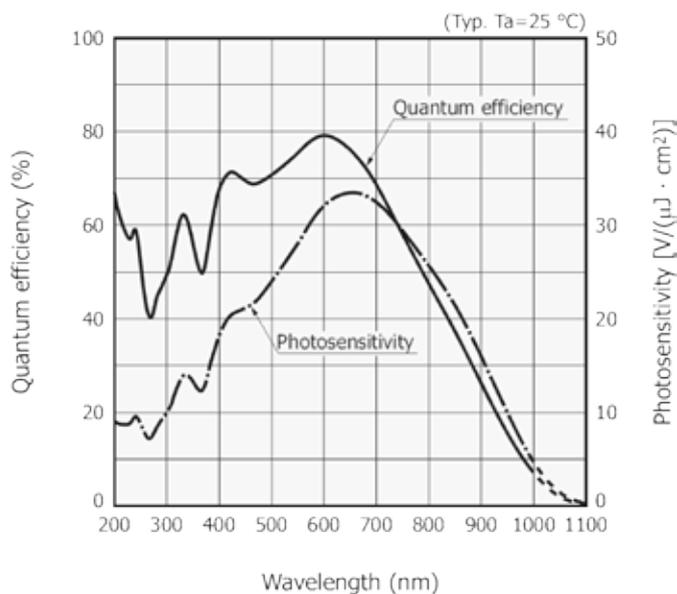

Spectral transmittance of window material

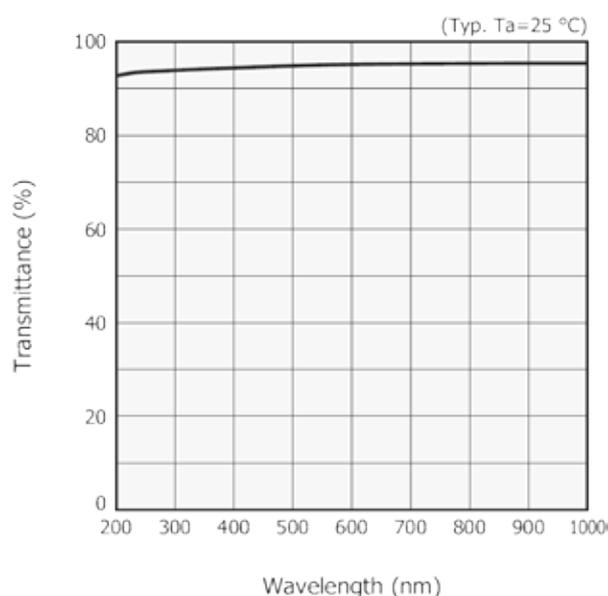

* Spectral response will degrade depending on the transmittance of the quartz glass.

Blooming

If by overexposure too many charge carriers are produced in one or several photosensitive elements (pixels) of the line sensor, the transport register is „flooded“ with charge carriers, and also the following register bins are charged over the saturation limit. This spreading of a local overexposure along a line is called „blooming“. In the resulting video signal an overexposed area includes too many pixels. In that area the geometric mapping between image and object is not correct.

CCD line scan cameras with anti-blooming sensors direct the abundant charge to a "drain gate". Charge overflow into adjacent, less illuminated pixels is prevented. Depending on pixel frequency and spectral range, overexposure up to factor of 50 can thus be handled.

Exposure period

is the illumination cycle of a line scan sensor. It is the → *integration time* plus the additional time to complete the read-out of the accumulated charges and the output procedure. While the charges from a finished line scan are being read out, the next line scan is being exposed. The exposure period is a function of the pixel number and the → *pixel frequency*. The minimum exposure period of a particular line scan camera determines the maximum → *line frequency* that is declared in the specifications.

Integration control

Cameras with integration control are capable of curtailing the → *integration time* within an → *exposure period*. This performs an action equivalent to a shutter mechanism.

Integration time

The light-sensitive elements of the photoelectric sensor accumulate the charge that is generated by the incident light. The duration of this charge accumulation is called the integration time. Longer integration times increase the intensity of the line scan signal, assuming constant illumination conditions. The complete read-out of accumulated charges and output procedure determines the minimum → *exposure period*.

Line frequency, line scan frequency

is the reciprocal value of the → *exposure period*. The maximum line frequency is a key criterion for line scan sensors as this is the limiting factor for the scan velocity.

Optical resolution

Two elements of a line scan camera determine the optical resolution of the system: first, the pixel configuration of the line sensor and, secondly, the optical resolution of the lens. The worst value is the determining value. In a phased set-up, both are within the same range.

The optical resolution of the line sensor is primarily determined by the number of pixels and secondarily by their size and spacing, the inter-pixel distance. Currently available line scan cameras have up to 12 000 pixels, ranging from 4 to 14 µm in size and spacing, for sensors up to 56 mm in length and line scan frequencies up to 83 kHz.

During a scanning run, the effective resolution perpendicular to the sensor orientation is determined by the velocity of the scan and by the → *line frequency*

Pixel frequency

The pixel frequency for an individual sensor is the rate of charge transfer from pixel to pixel and its ultimate conversion into a signal.

Region of Interest

A freely programmable window (region of interest, ROI) can be applied to the line sensor so that only the pixel information within the ROI can reach the memory.

By only illuminating these ranges, data volume and data processing is accelerated for both line and area scan acquisitions.

Constraint: the ROI memory allocation must be divisible by 8.

Shading correction

→ *Shading Correction*, section 3.2

SCM

Shading Correction Memory,

→ *Shading Correction Memories and API Functions*, section 3.2

SoI (Start of Integration)

In addition to → *SoS*, cameras with → *Integration Control* function generate an internal SoI-signal that initiates the integration period.

SoS (Start of Scan)

is an internally generated trigger signal for sequential control of the camera, The signal is induced either by an internal counter or by an external line synchronization signal, depending on the selected line synchronization mode.

→ *Synchronization*

→ *Advanced Synchronization Control*, section 4.2

SkLineScan

is the software application from Schäfter + Kirchhoff for controlling and adjusting the line scan cameras,

→ **Software: SkLineScan**, section 3.1

Synchronization

To obtain a proportional image with the correct aspect ratio, a line synchronous transport with the laterally correct pixel assignment is required. The → **Line frequency** and constant object velocity have to be compatible with each other.

For more accurate requirements or with a variable object velocity, external synchronization is necessary.

→ **Synchronization of the Imaging Procedure and the Object Scan Velocity**, section 3.2

Thresholding (monochrome cameras only)

The thresholding process generates a binary signal from the gray scale data, with values below the threshold yielding 0 and those above yielding 1. Only the pixel addresses of the location and threshold transition (from high→low or low→high) are transmitted, reducing data throughput.

Thresholding is particularly appropriate for measuring widths or edge positions, by simply masking the required pixel addresses.



The product complies with the following standards and directives:

2014/30/EU

EMC Directive

DIN EN 61326-1:2013

Electrical equipment for measurement, control and laboratory use – EMC requirements

Part 1: General requirements

This manual has been prepared and reviewed as carefully as possible but no warranty is given or implied for any errors of fact or in interpretation that may arise. If an error is suspected then the reader is kindly requested to inform us for appropriate action.

The circuits, descriptions and tables may be subject to and are not meant to infringe upon the rights of a third party and are provided for informational purposes only.

The technical descriptions are general in nature and apply only to an assembly group. A particular feature set, as well as its suitability for a particular purpose, is not guaranteed.

Each product is subjected to a quality control process. If a failure should occur then please contact the supplier or Schäfter + Kirchhoff immediately.

The warranty period covers the 24 months from the delivery date. After the warranty has expired, the manufacturer guarantees an additional 6 months warranty for all repaired or substituted product components.

Warranty does not apply to any damage resulting from misuse, inappropriate modification or neglect. The warranty also expires if the product is opened. The manufacturer is not liable for consequential damage.

If a failure occurs during the warranty period then the product will be replaced, calibrated or repaired without further charge. Freight costs must be paid by the sender. The manufacturer reserves the right to exchange components of the product instead of making a repair. If the failure results from misuse or neglect then the user must pay for the repair. A cost estimate can be provided beforehand.

Copyright ©

Unless explicitly allowed, distribution, sale or use of this document or its contents, for purposes other than those intended, is forbidden. Repeated transgressions will lead to prosecution and demands for compensation.

All rights of patent protection and registration or copyright of a product or its design lie with Schäfter+Kirchhoff. Schäfter+Kirchhoff GmbH and the Schäfter+Kirchhoff logo are registered trademarks.

We reserve the right to improve or change specifications so that the system description and depictions in the Instruction Manual may differ in detail from the system actually supplied. The Instruction Manual is not covered by an update service.

Date of document publication: 08.03.2019

Schäfter+Kirchhoff GmbH

Kieler Straße 212

22525 Hamburg

Germany

Tel.: +49 40 853997-0

Fax: +49 40 853997-79

Email: info@SuKHamburg.de

Internet: www.SuKHamburg.com



The Schäfter + Kirchhoff GigE Vision™ line scan cameras use the Gigabit Ethernet communication protocol and are 100% compliant with the GigE Vision™ specifications and the Gen<i>Cam™ standard. They implement a superset of the Gen<i>Cam™ specification which defines the device capabilities. The settings are made in the device feature list of any Gen<i>Cam™ compliant software.

The Gen<i>Cam™ standard provides a generic programming interface for all kinds of cameras and, no matter what features they implement, the application programming interface (API) always remains the same.

Accessories



CAT6 Network cable

Shielded CAT6 patch cable, halogen-free, both ends with RJ45 connectors for Gigabit Ethernet

CAT6.x

Order Code

cable length 3 / 5 / 10 m or length according to choice, max. 100 m



Power cable SK9014.xF

for GigE Vision™ line scan cameras with 24VDC supply voltage.

Shielded cable with Hirose plug HR10A, female 4-pin (camera side), and open-ended line.

SK9014.xF

Order Code

cable length 1.5 / 3 / 5 m



External synchronization cable SK9024...

for line scan cameras with GigE / GigE Vision™ interface.

Shielded cable with Hirose plug HR10A, female 12 pin (camera side), and Phoenix 4 pin connector incl. terminal block.

SK9024.x

Order Code

cable length 3 / 5 m
Other lengths on request



Power cable SK9014.xMF

for GigE Vision™ line scan cameras with 24VDC supply voltage.

Shielded cable with Hirose plug HR10A, female 4-pin (camera side), and XLR connector type NC6MXX.

SK9014.xMF

Order Code

cable length 1.5 / 3 / 5 m



Adapter cable for sync signals CAB-ADSync-BNC-1

BNC/SMA (3x) to Line Scan Camera Synchronization Cable SK9016/SK9024/SK9026.

Shielded cable, length 0.25 m

Connectors:

- 1x Phoenix 4-pin connector
- 3x SMA plug (Line Sync A, Line Sync B, Frame Sync)
- 3x adapter SMA socket (outside threading) to BNC-plug

CAB-ADSync-BNC-1

Order Code



Power supply unit PS243005

Input: 100-240 VAC, 0.8A, 50/60 Hz
IEC 60320 C14 coupler (for IEC C13 power cord)

Output: +24 V DC, 3.0A

Cable length: 1 m, with XLR connector type NC6FFX

PS243005

Order Code

Power cord IEC 60320 C13, 1.5 m, 10A, 250V AC

PC150DE

Order Code

DE = Europe / US = USA, Canada, Japan / UK = United Kingdom

DE US UK


M2 Mounting Bracket SK5105-L



Order Code
SK5105-L

Mounting diameter 47.5 mm, for cameras with square housing Bxx and round housing Ax3

SK5105-L with clamping set SK5101#

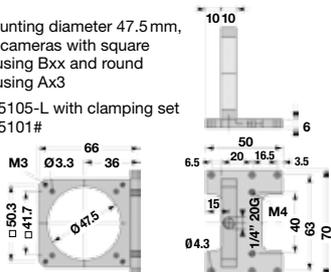

MC Clamping Set SK5101



Order Code
SK5101
(set of 4 pcs.)


Allen screw
DIN 912-M3x12

M4 Mounting System SK5105-2L



Order Code
SK5105-2L

For camera configurations with tube length > 55 mm using extension rings **ZR-L**

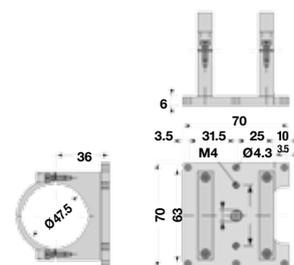


FA1 Focus adapter FA22...



FA22-x

Order Code

- 42 = M42 x 1
 - 40 = M40 x 0.75
 - 39 = M39 x 1/26"
 - 32 = M32 x 0.75
 - C = C-Mount
- length L: 22 ... 32 mm

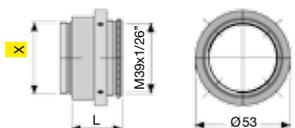

ZR Extension rings L-Mount (M39x1/26" Leica)

attachment threads M39x1/26" male/female



ZR 10

Order Code

- 10 = Length 10 mm
- 15 = Length 15 mm
- 20 = Length 20 mm
- 50 = Length 50 mm

